

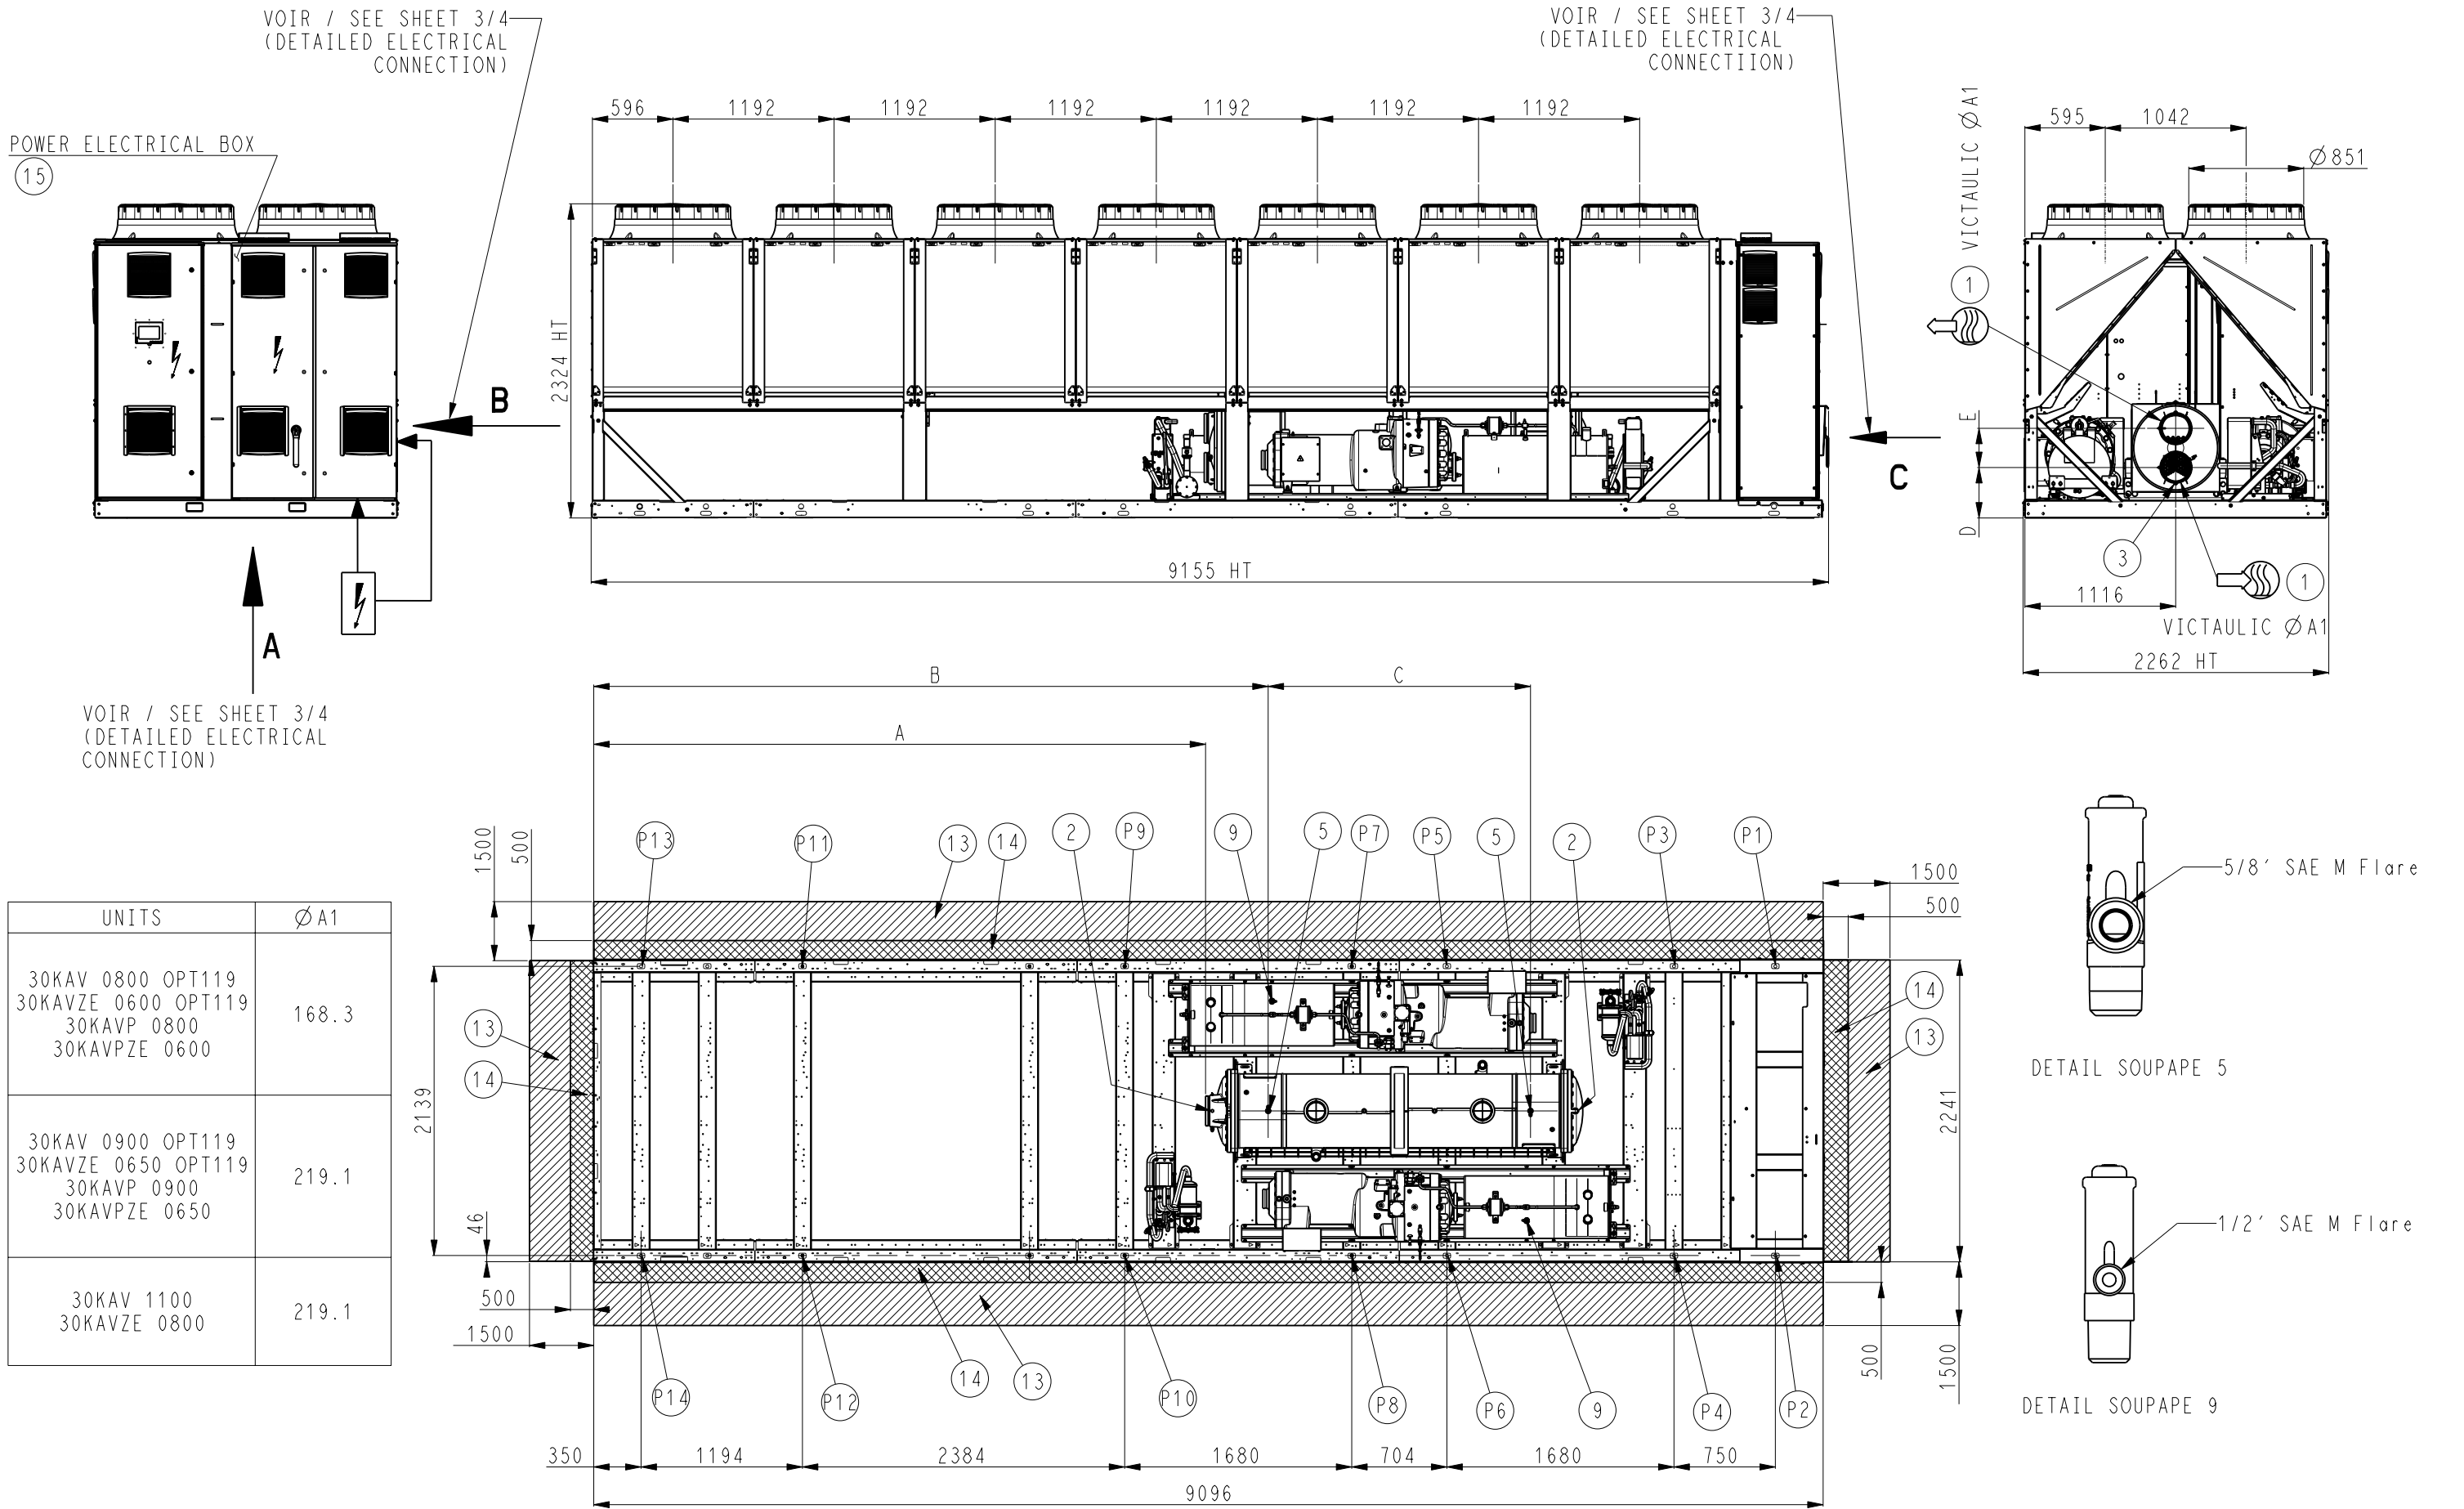
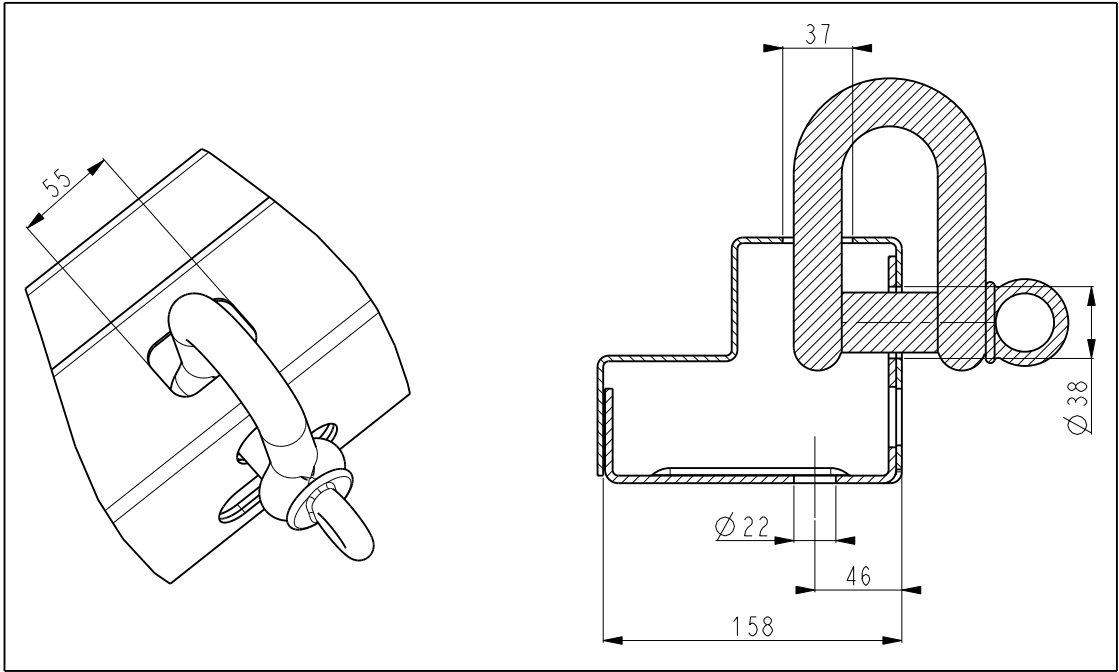
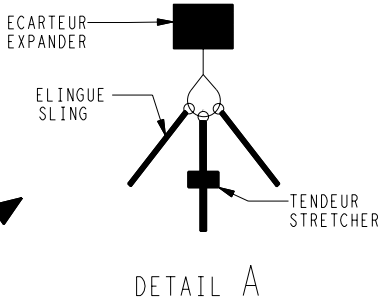


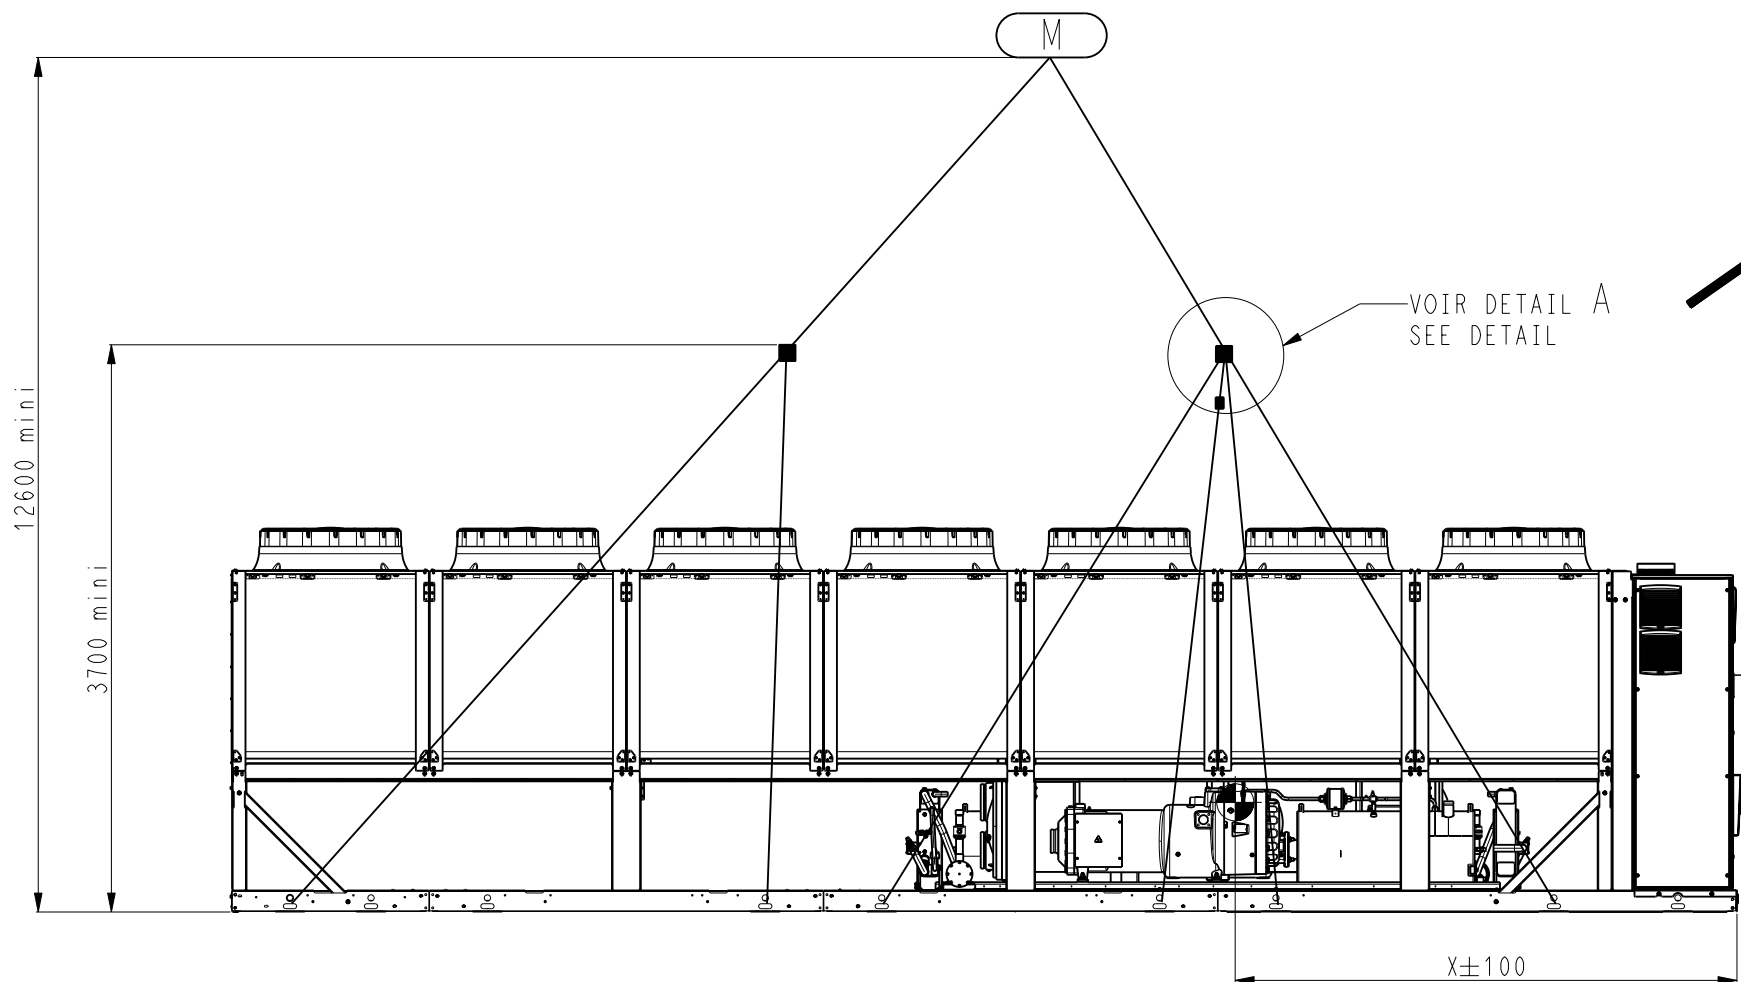

UNITS	ØA1
30KAV 0800 OPT119 30KAVZE 0600 OPT119 30KAVP 0800 30KAVPZE 0600	168.3
30KAV 0900 OPT119 30KAVZE 0650 OPT119 30KAVP 0900 30KAVPZE 0650	219.1
30KAV 1100 30KAVZE 0800	219.1

UNITS				A	B	C	D	E
KAV	KAVZE	KAVP	KAVPZE					
0800 OPT119	0600 OPT119	0800	0600	4535	4992	1766	401	284
0900 OPT119	0650 OPT119	0900	0650	4529	4992	1766	373	290
1100	0800	-	-	4529	4992	1941	373	290

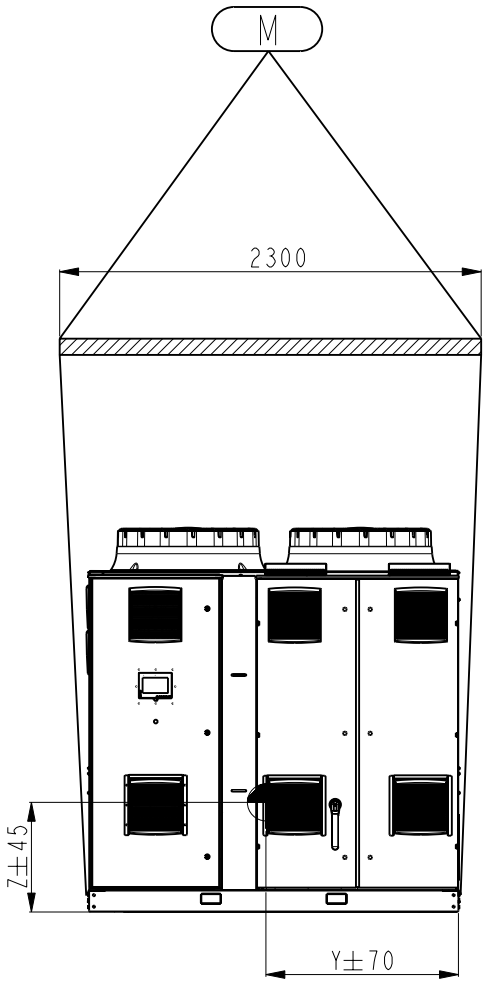


UNITS		X	Y	Z
30KAVZE	30KAV			
0600 OPT119	0800 OPT119	3025	1164	672
0650 OPT119	0900 OPT119	3034	1163	663
0800	1100	3023	1110	656


UNITS		X	Y	Z
30KAVPZE	30KAVP			
0600	0800	3025	1164	672
0650	0900	3034	1163	663

ELECTRICAL BOX : POWER CONNECTION FOR 30KAV 0800-0900 OPT 119 / 30KAVP 0800-0900 / 30KAVZE 0600-0650 OPT 119 / 30KAVPZE 0600-0650


STANDARD

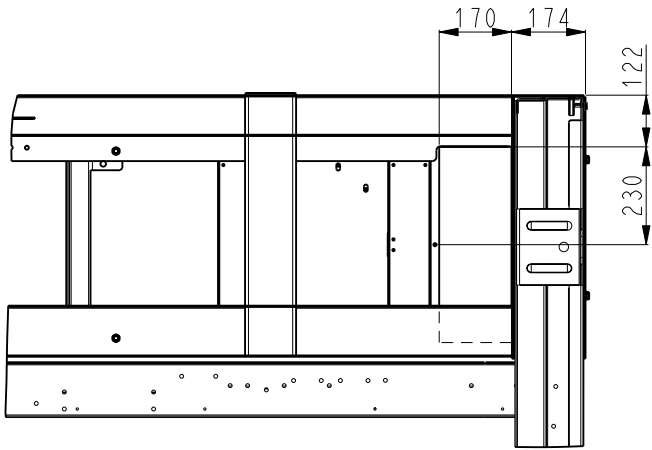

VUE / VIEW A

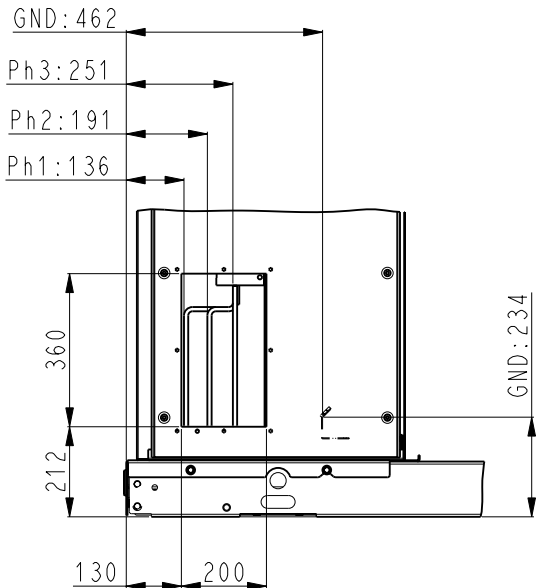


VUE / VIEW B

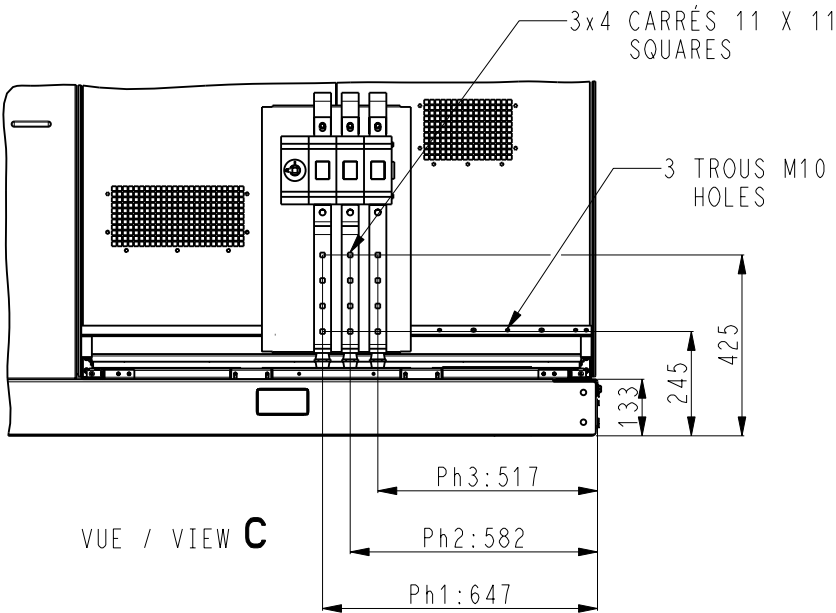


VUE / VIEW C


OPTION 70D

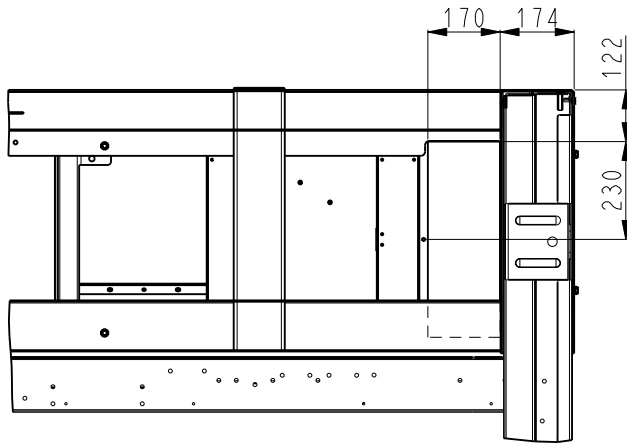

VUE / VIEW A

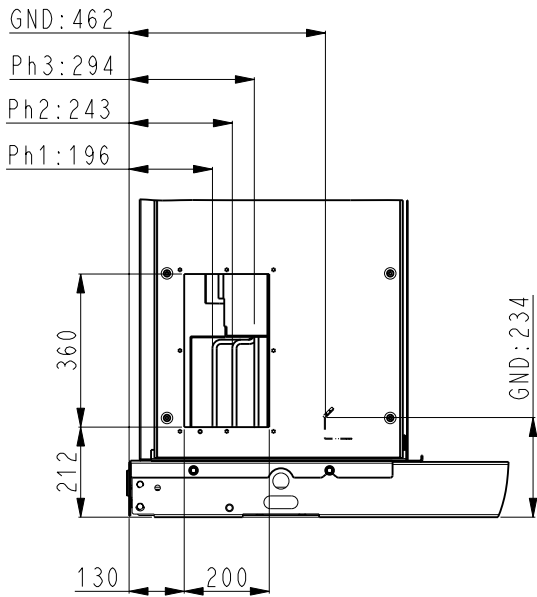


VUE / VIEW B

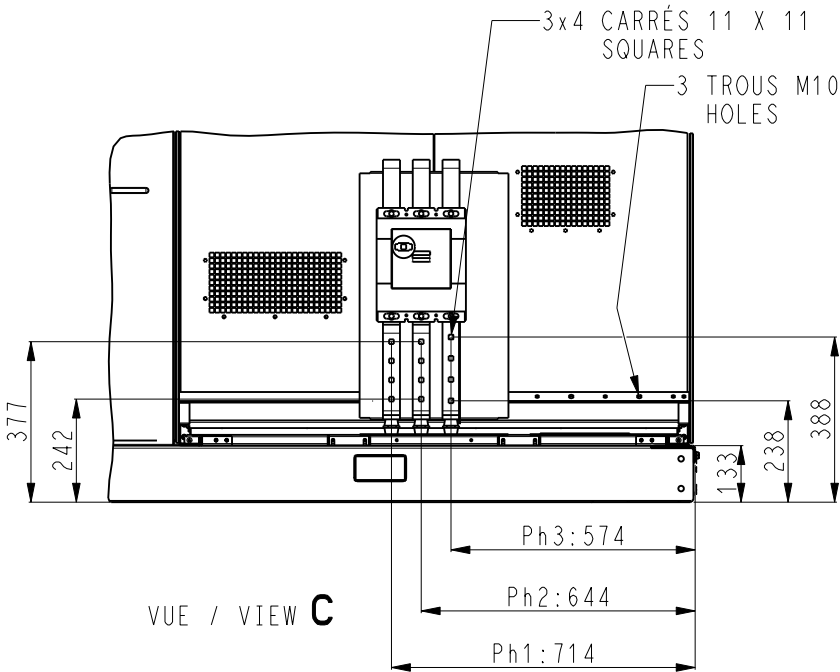


VUE / VIEW C

ELECTRICAL BOX : POWER CONNECTION FOR 30KAV 1100 / 30KAVZE 0800


STANDARD

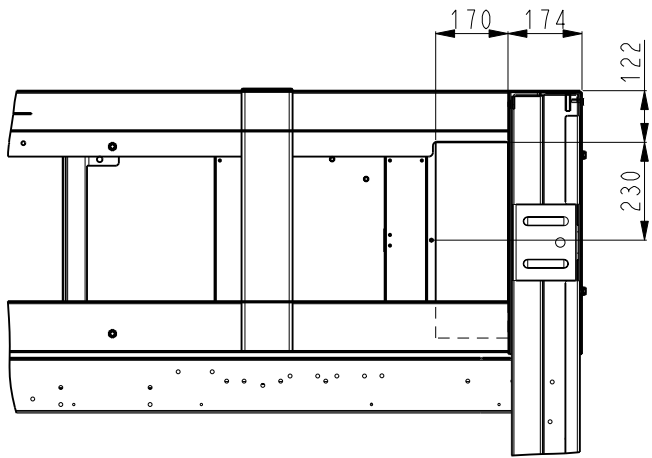

VUE / VIEW A

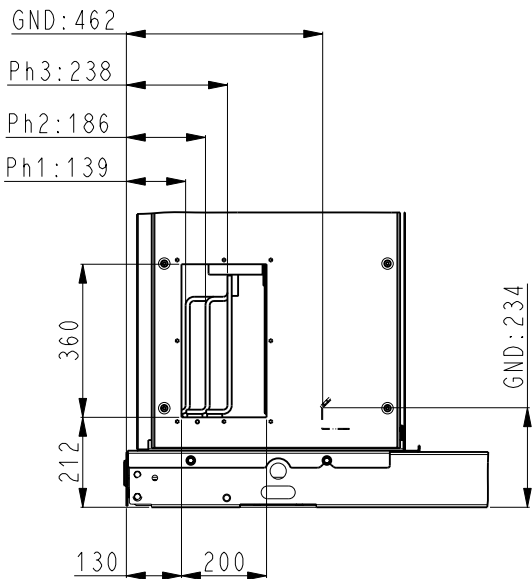


VUE / VIEW B

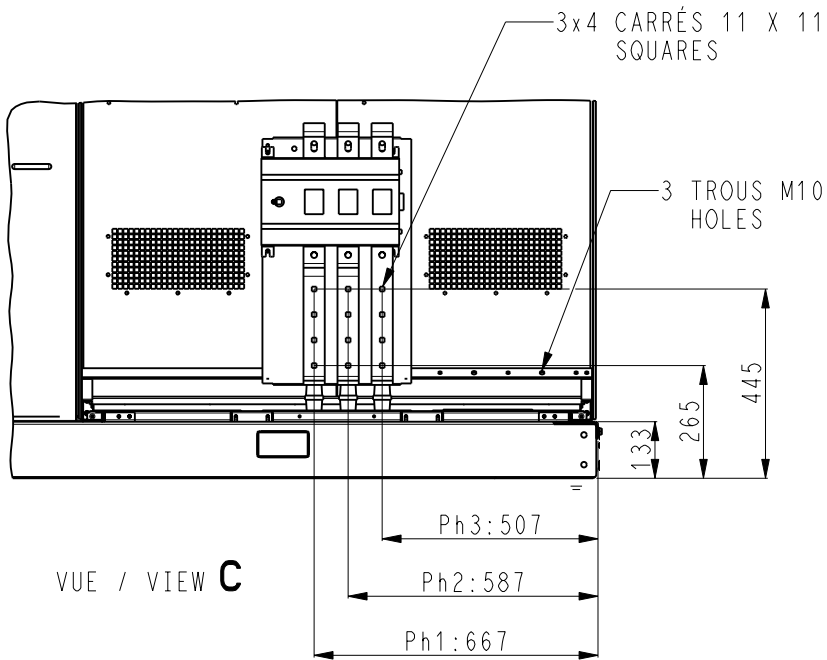


VUE / VIEW C


OPTION 70D

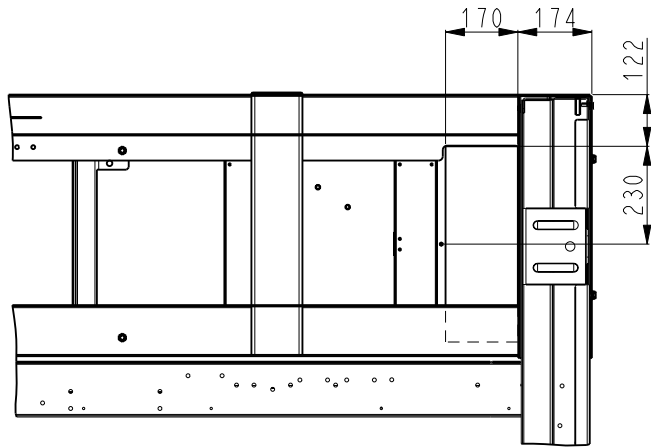

VUE / VIEW A

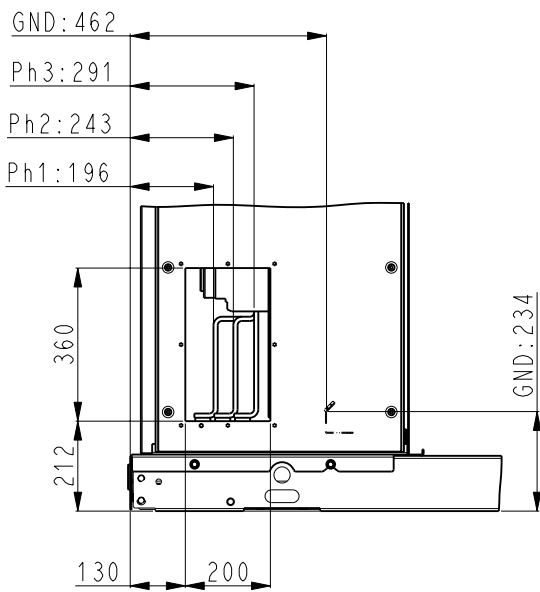

VUE / VIEW B

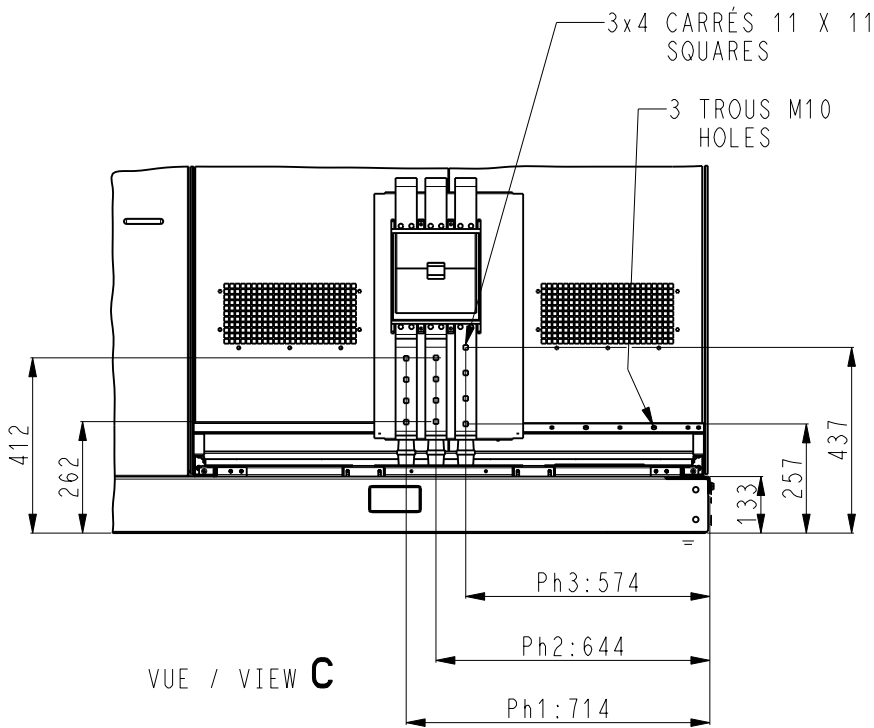

VUE / VIEW C

