
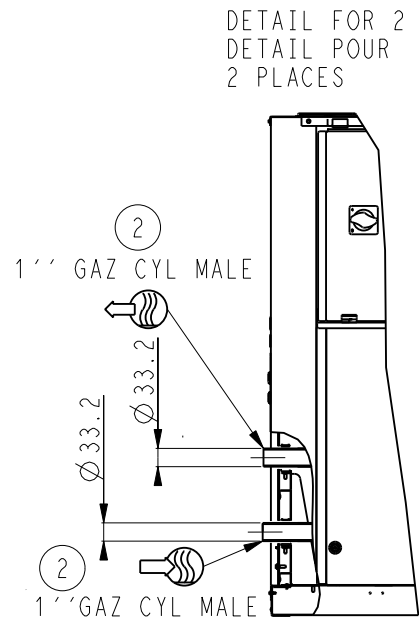
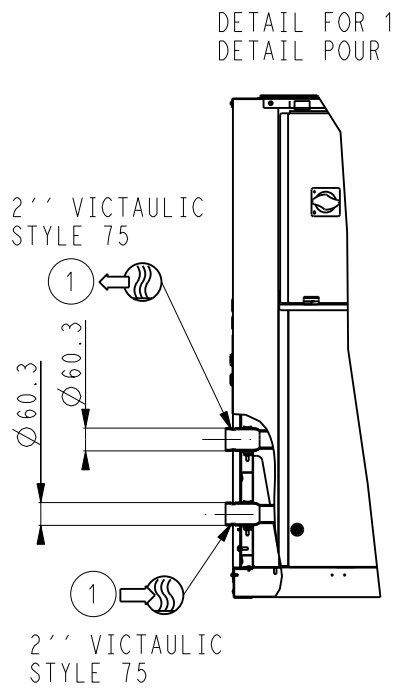
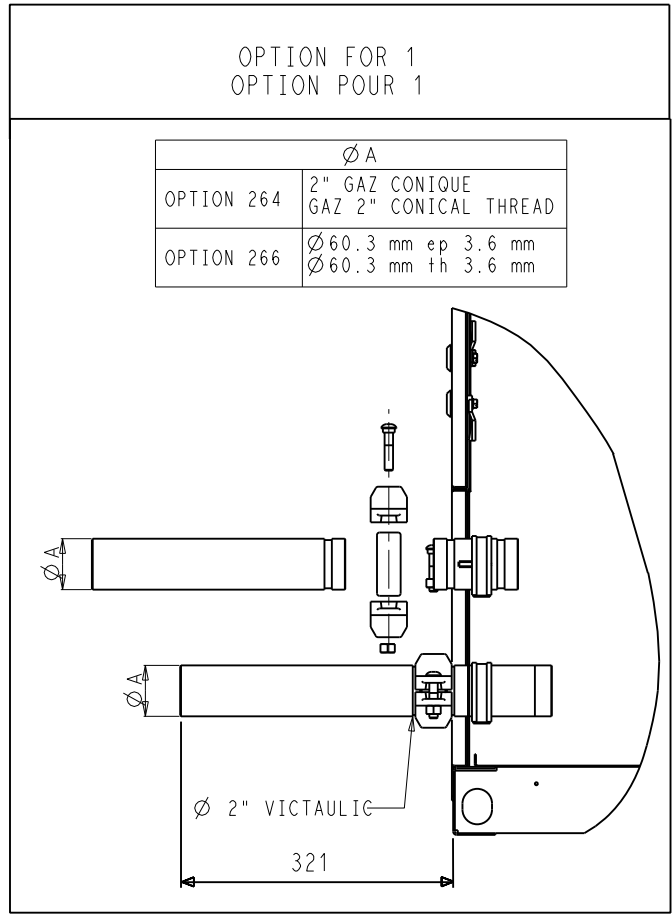


OVERALL DIMENSIONS AND WATER INLET AND OUTLET CONNECTION

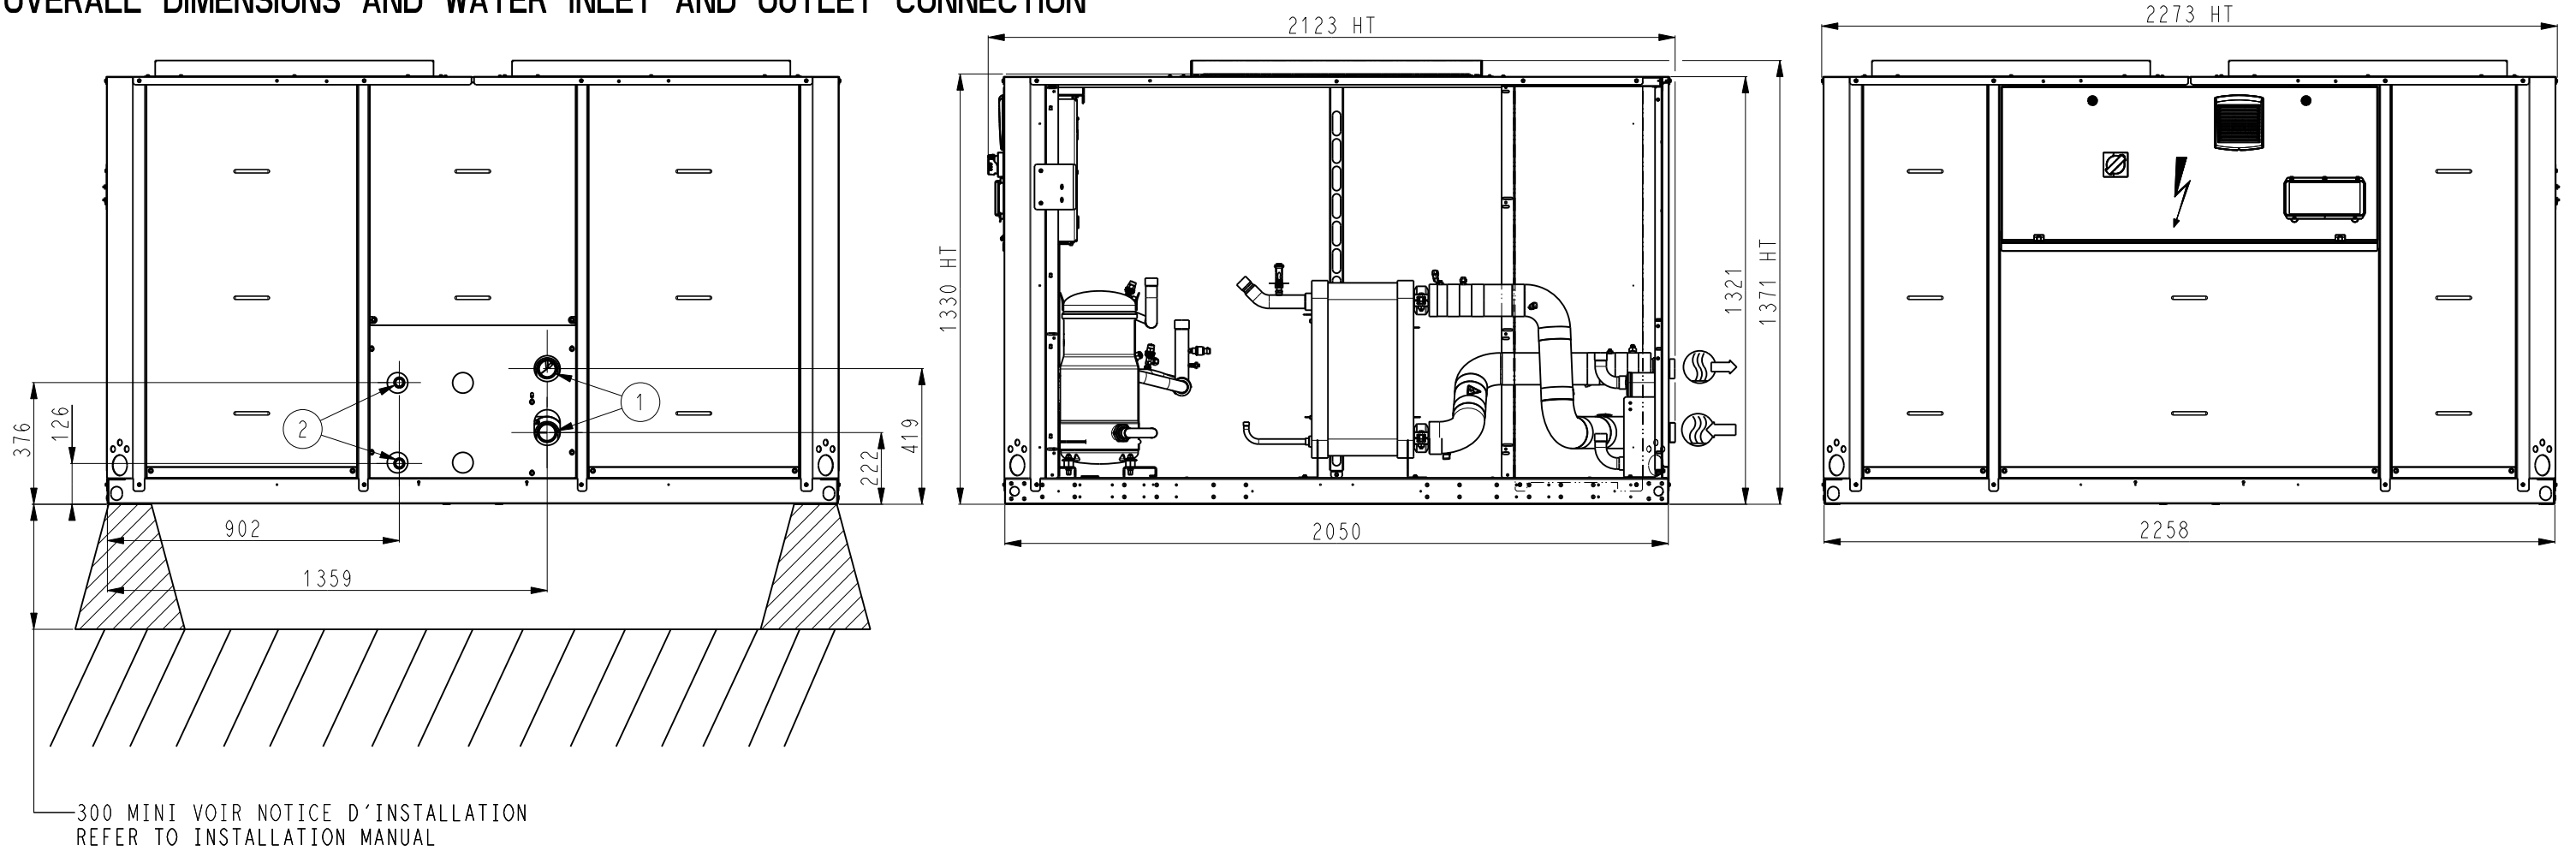

② OPTION RÉCUPÉRATION PARTIELLE DE CHALEUR SEULEMENT
OPTION PARTIAL HEAT RECOVERY ONLY


GRILLE EN OPTION
GRILL ON OPTION

TOLERANCE	30RQ 090R - 0120R	DATE	11-Aug-23	Feuille Sheet 1/6
±10	*			Indice
				D




00DCG000422100


COG AND LIFTING INFORMATION

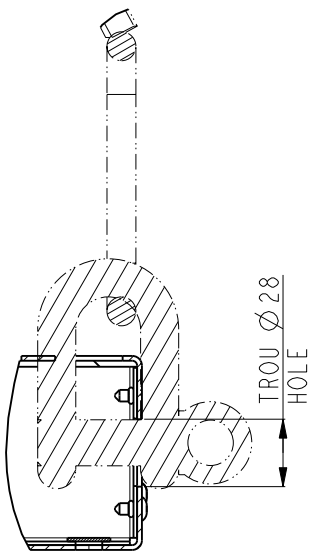

COUPE / SECTION B-B
ECHELLE 5:16


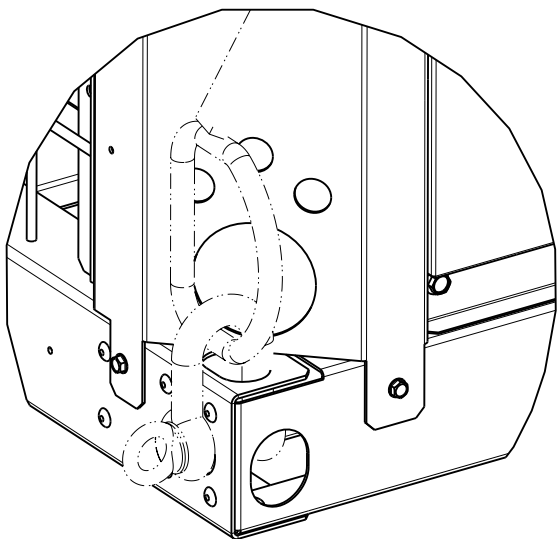


DETAIL A
ECHELLE 1:4

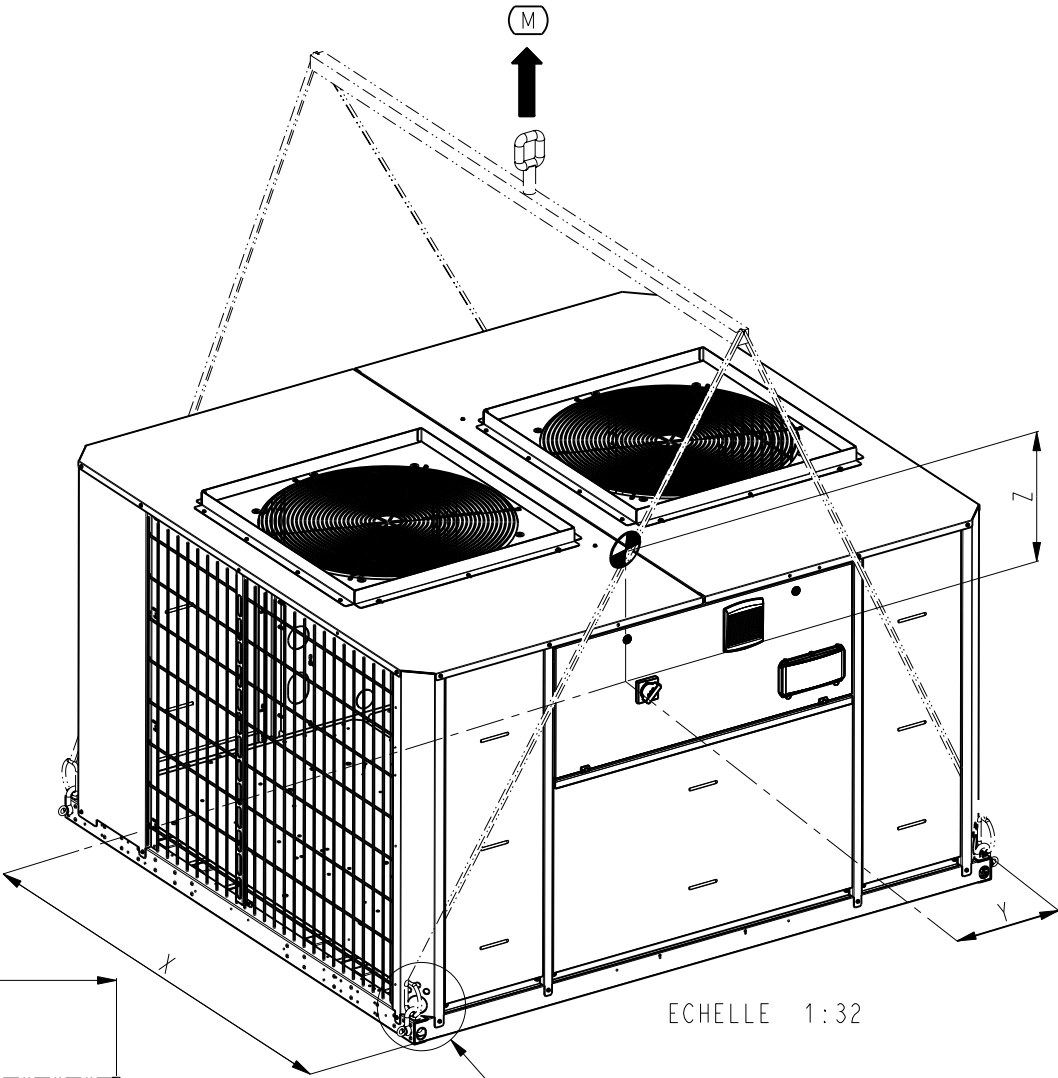


ECHELLE 1:32

VOIR DETAIL A
SEE DETAIL

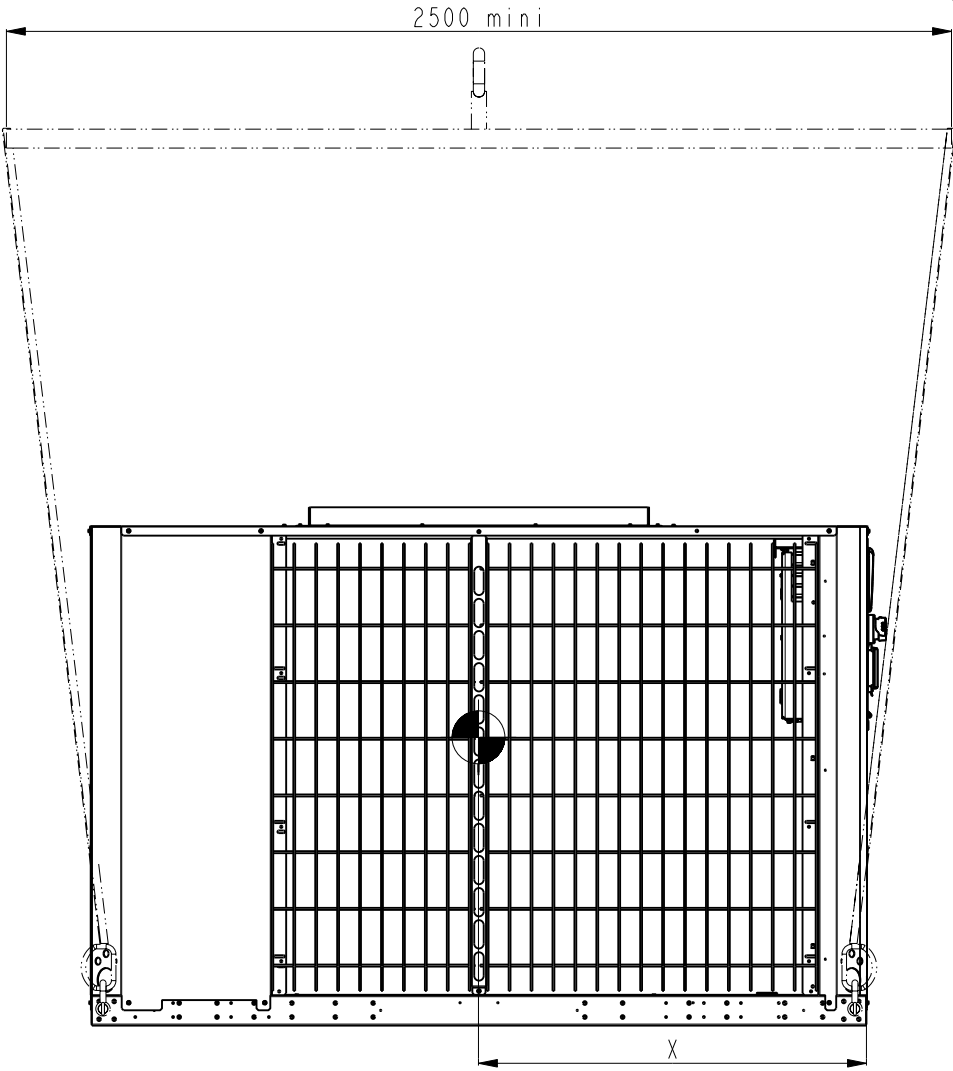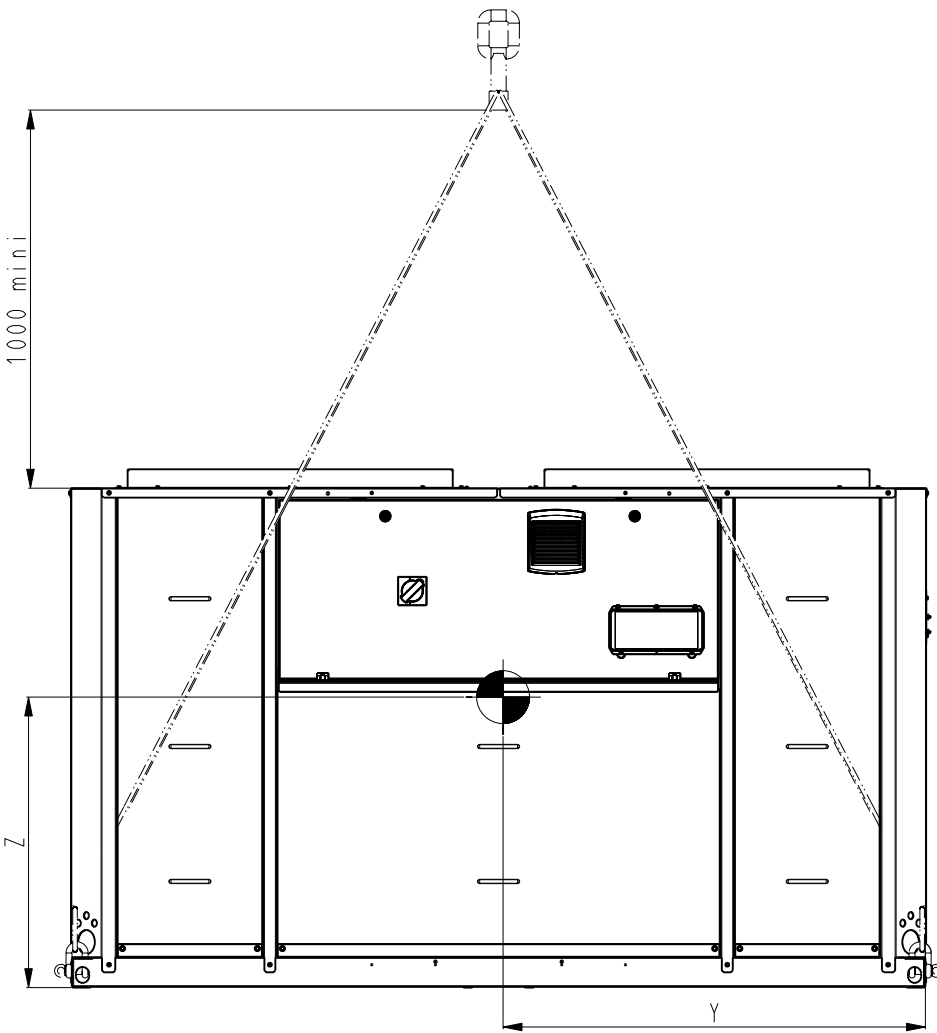

X (mm)	Y (mm)	Z (mm)
850±70	1168±35	577±25





ELECTRICAL BOX INFORMATION

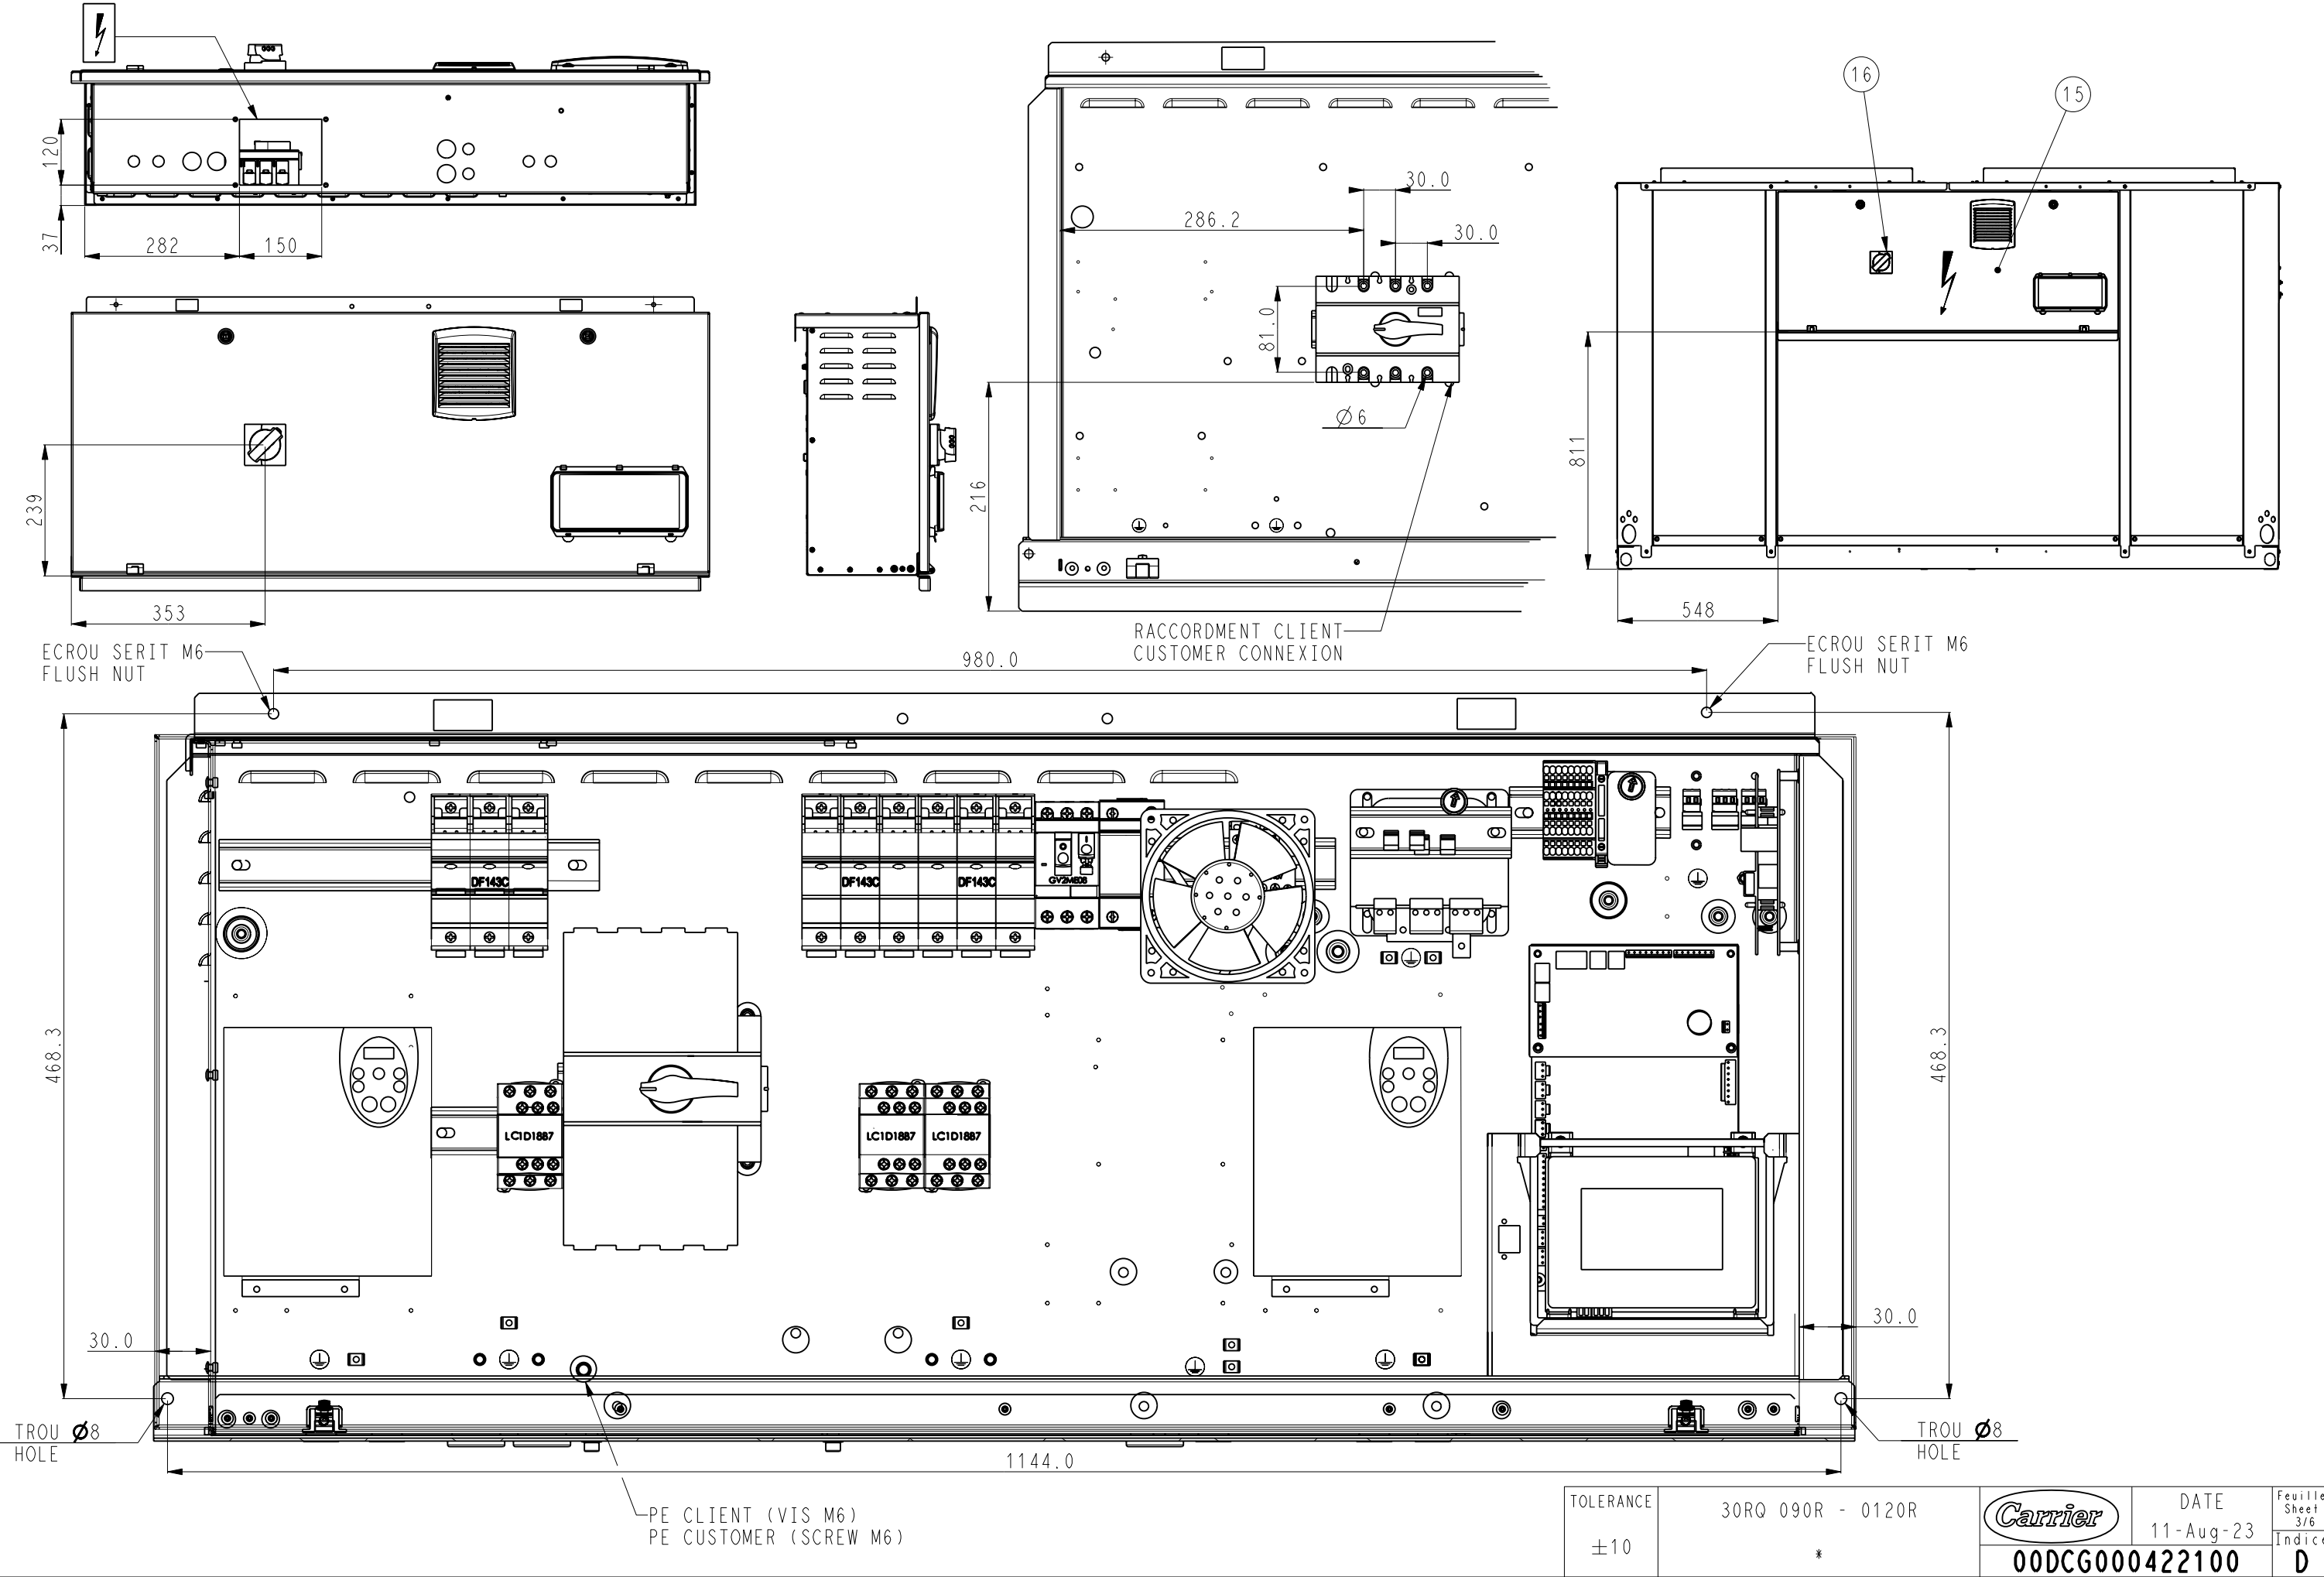




OPTION POUR XTRA FAN*
OPTION FOR XTRA FAN*

XTRA FAN OPTION INFORMATION

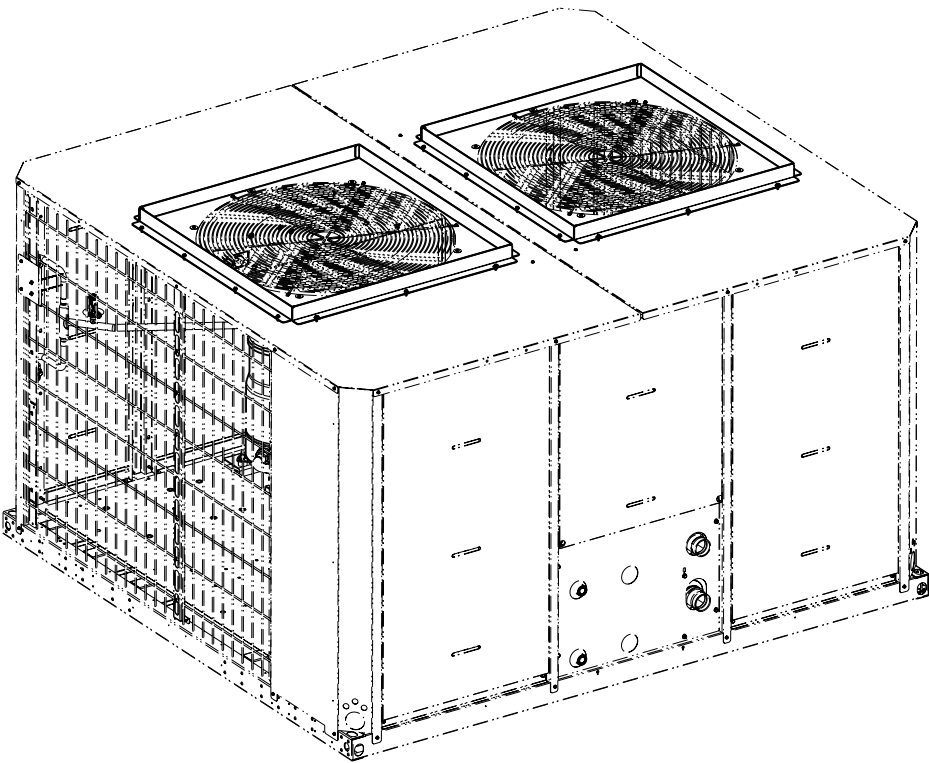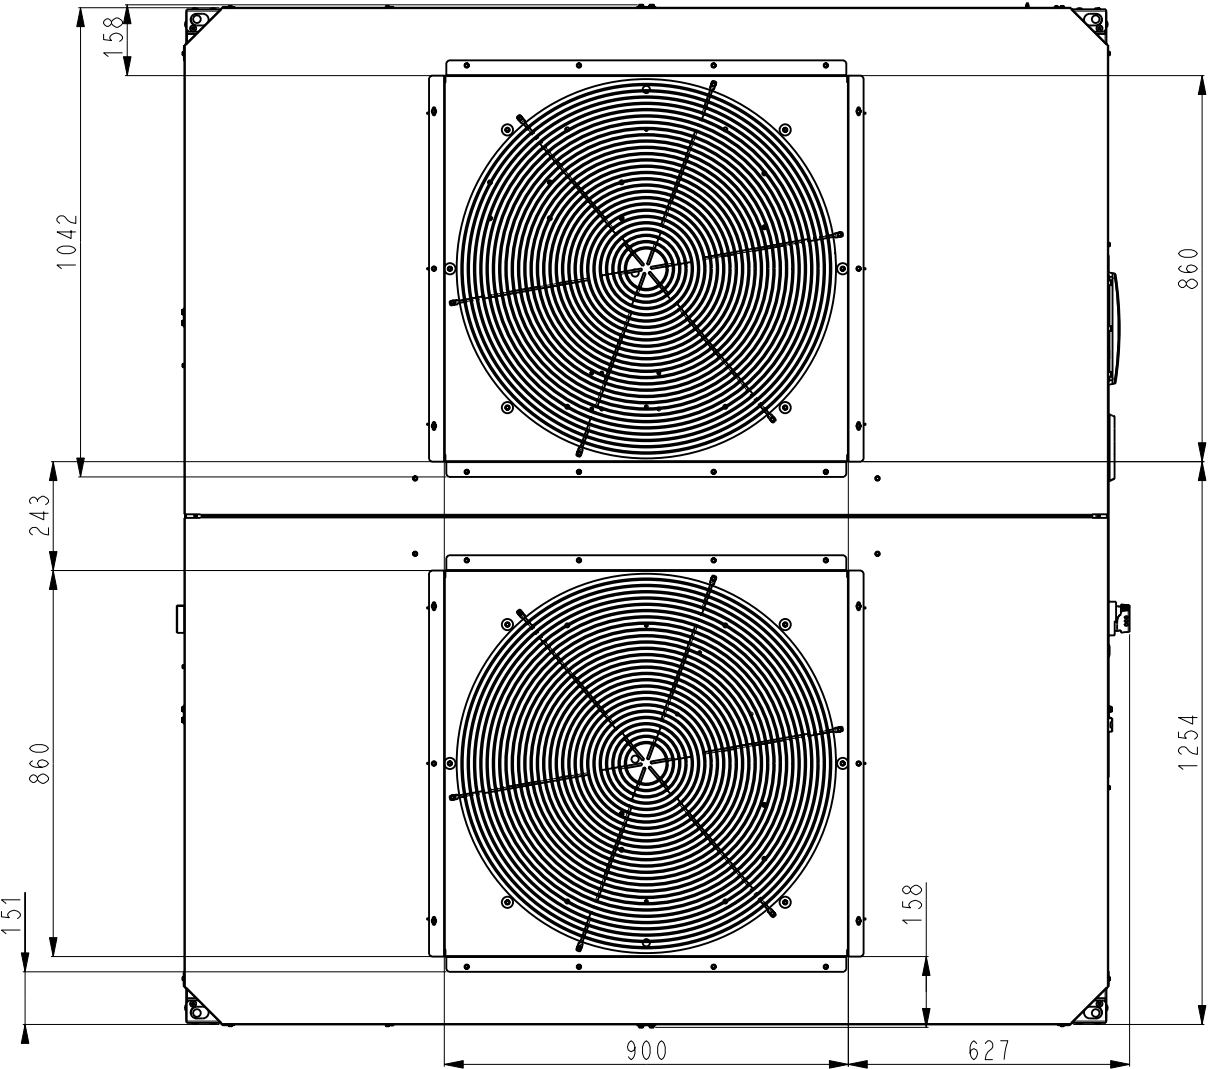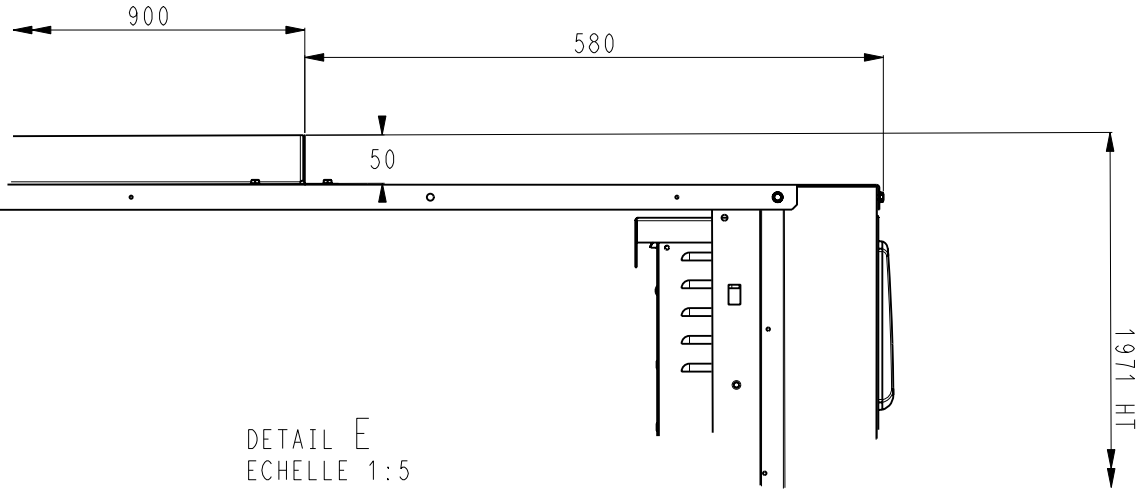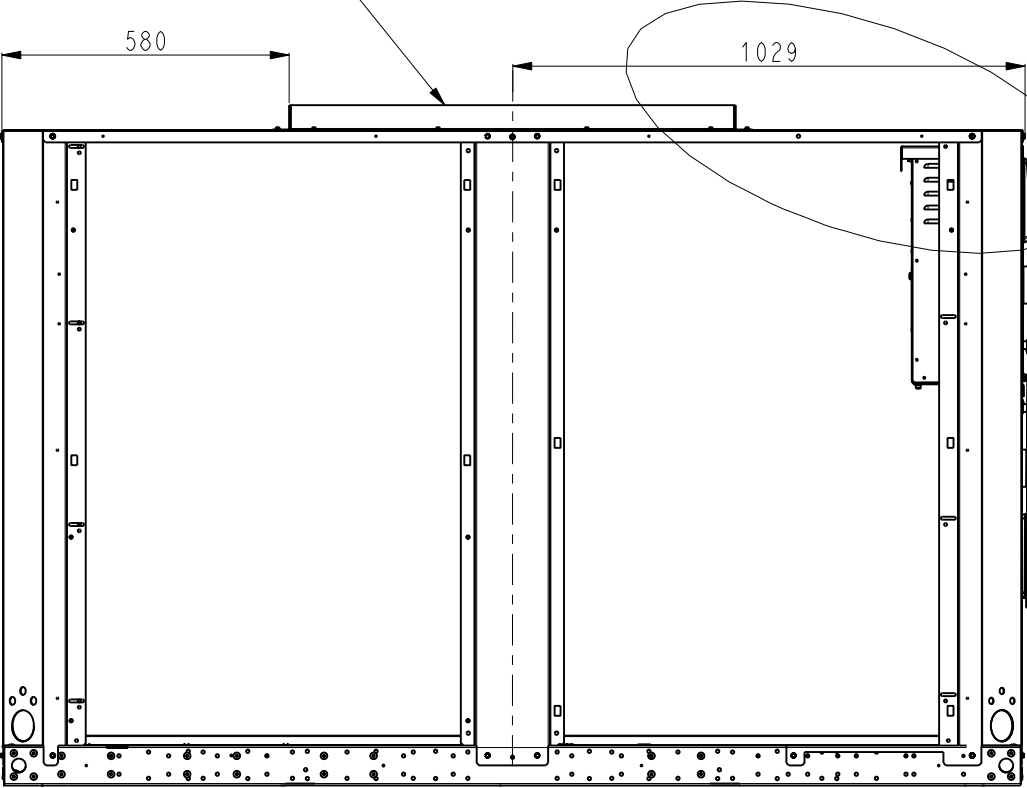

TOLERANCE ±10	30RQ 090R - 0120R *	 00DCG000422100	DATE 11-Aug-23	Feuille Sheet 5/6 Indice D

 					00DCG000422100 D
SYMBOLS DESCRIPTIONS					
	ENGLISH	FRANCAIS	DEUTSCHE	ESPANOL	ITALIANO
	Unit water inlet and outlet	Entrée et sortie eau unité	Wasser eintritt und austritt	Entrada y salida agua unidade	Entrata e uscita acqua unita
	Water inlet and outlet OPT 049	Entrée et sortie eau OPT 049	Eintritt und austritt OPT 049	Entrada y salida agua OPT 049	Entrata e uscita acqua OPT 049
	N/A	N/A	N/A	N/A	N/A
	NA	NA	NA	NA	NA
	Safety relief valve LP	Soupape de sécurité BP	Verdampfer sichereitsventil LP	Valvula de seguridad LP	Valvola di sicurezza LP
	Safety relief valve HP	Soupape de sécurité HP	Verdampfer sichereitsventil HP	Valvula de seguridad HP	Valvola di sicurezza HP
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	Services clearances required	Espace nécessaire à la maintenance	Freiraum für wartung	Espacio necesario para servicio y mantenimiento	Spazio necessario per il servizio
	NA	NA	NA	NA	NA
	Electrical box	Coffret électrique	Schaltschrang	Caja electrica	Pannello elettrico
	Main disconnect switch	Interrupteur général	Haupttrennschalter	Interruptor de desconexion principal	Sezionatore general
	N/A	N/A	N/A	N/A	N/A
	Power supply unit recommend section wire (see IOM)	Raccordement électrique unité section recommandée (voir IOM)	Hauptelektrische anschluss querschnitt (IOM sehen)	Conexiones electricas unidade section recomendada (ver IOM)	Conezione elettrica de l'unità sezione racomandato(vedi IOM)
	Mass ditribution point	Point de répartition de masse	Massenverteilungspunkt	Punto de distribución masiva	Punto di distribuzione di massa
	Inlet water	Entrée eau	Wasser eintritt	Entrada agua	Entrata acqua
	Outlet water	Sortie eau	Wasser austritt	Salida agua	Uscita acqua
	Electrical supply entry	Entrée raccordement électrique	Strom Anschlüsse	Entrada cables electricos	Entrata cavi alimentazione
	NA	NA	NA	NA	NA
	Center of gravity	Centre de gravité	Maschinenschwerpunkt	Centro de gravedad	Centro di gravita
	Handling Rigging of the unit: the sizing of the rigging or lifting elements is the responsibility of the installer	Manutention de l'unité Le dimensionnement des éléments de manutention ou de levage sont sous la responsabilité du manutentionnaire	Anheben des geräts Der installateur ist für die dimensionierung der hebeelemente verantwortlich	Sostienento de la unidad Las dimensiones de los elementos de sostienento o levantamiento es responsabilidad de instalador	Sollevamento dell'apparechio La responsabilita del dimensionamento degli elementi di sistema di sollevamento e di pertinenza dell'installatore
				TOLERANCE ±10	30RQ 090R - 0120R *
					DATE 11-Aug-23
				00DCG000422100	Feuille Sheet 6/6 Indice D