

Fault table	
Code	Fault content
E1	Phase sequence fault(Reserved)
E2	Hydronic box and ODU communication fault(Reserved)
E4	Outdoor ambient temperature sensor (T4) fault
E6	Condenser temperature sensor (T3) fault
E8	Discharged temperature sensor (Tp) fault
E9	AC overvoltage/undervoltage fault
E10	EEPROM fault
EA	Condenser temperature sensor (T3B) fault(Reserved)
EC	Refrigerant cooling outlet pipe temperature sensor (T7) fault
H0	Communication fault between main PCB and IPM
H1	Communication fault between ODU main board and IDU main board
H4	3 times P6 protection in 30 min
H5	3 times P2 protection in 30 min
H6	3 times P4 protection in 100 min
H7	The quantity of IDU is decreased(Reserved)
H9	2 times P9 protection in 10 min
H10	3 times P3 protection in 60 min
H11	2 times P13 protection in 10 min(Reserved)

