

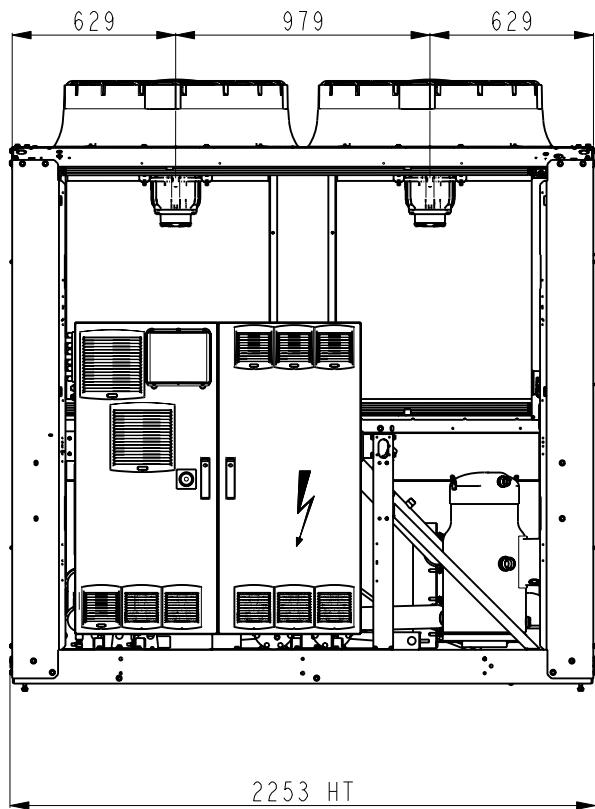
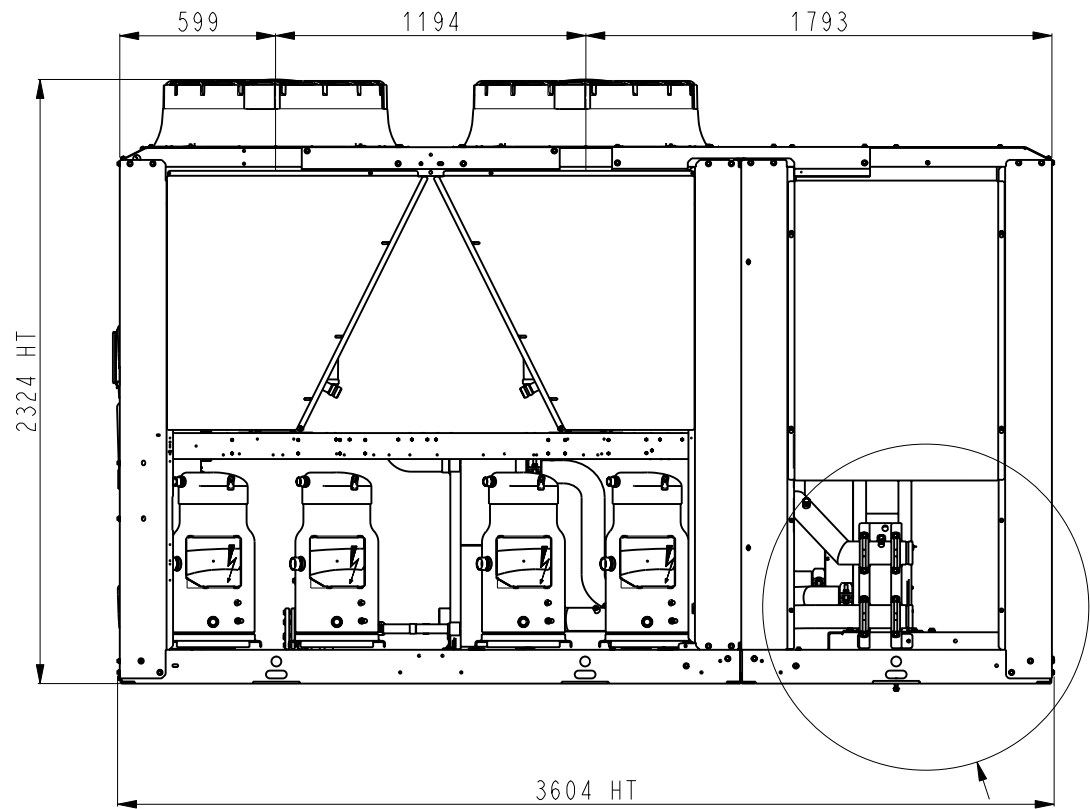
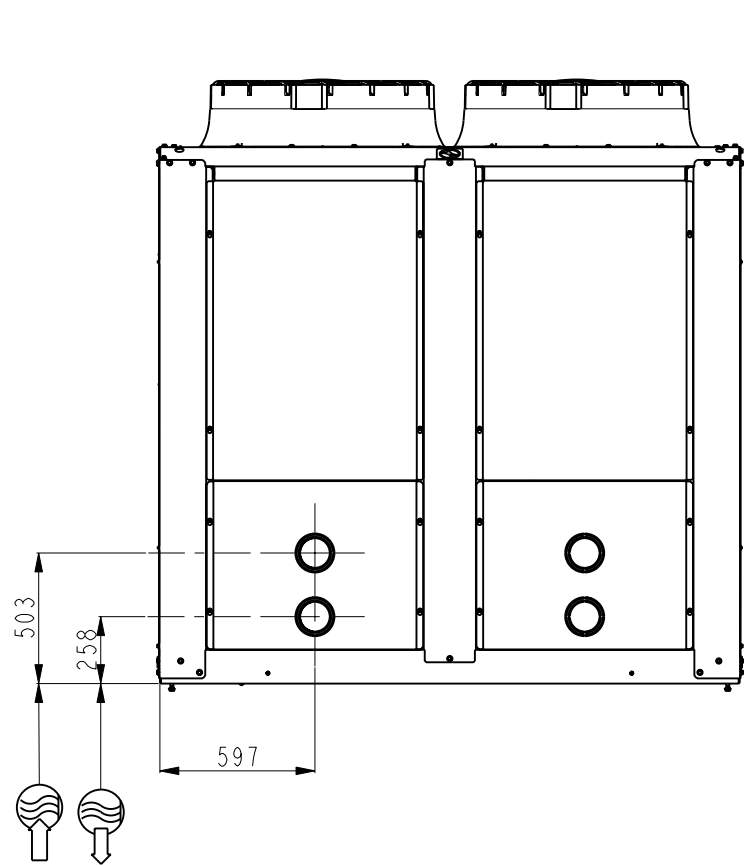
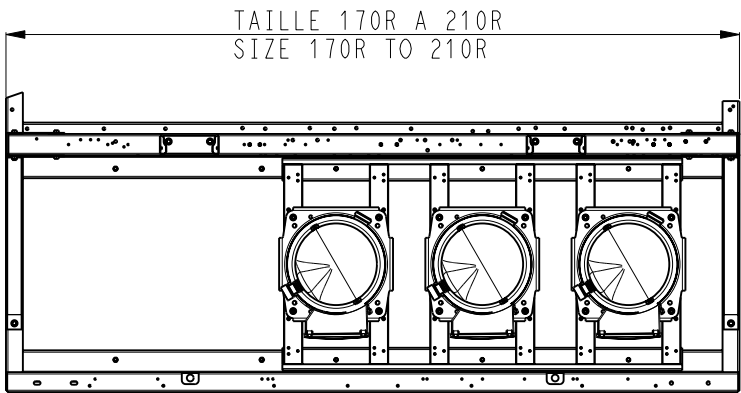


OVERALL DIMENSIONS AND WATER INLET AND OUTLET CONNECTION

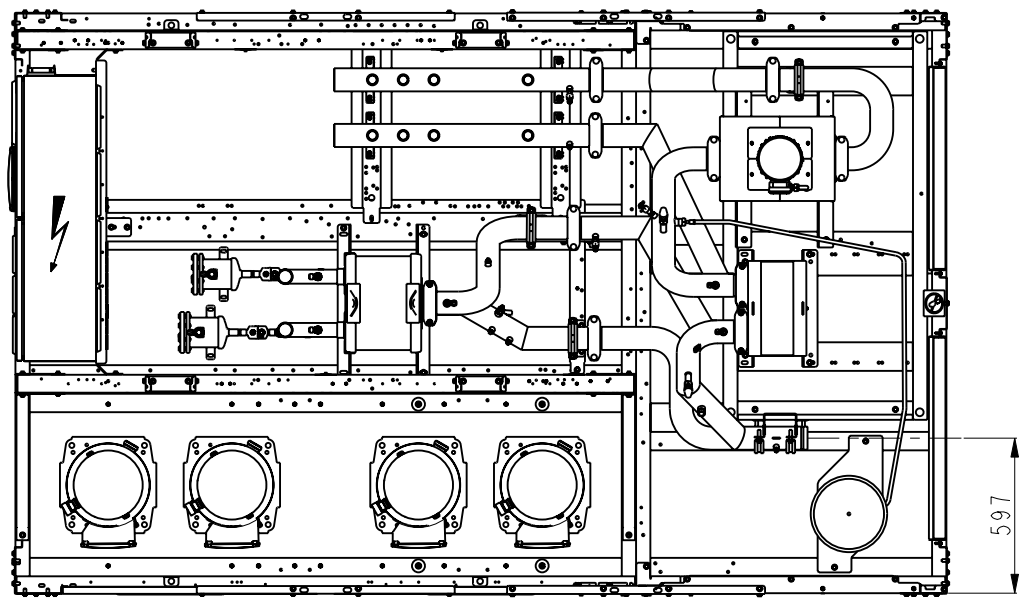


VOIR DETAIL A
SEE DETAIL

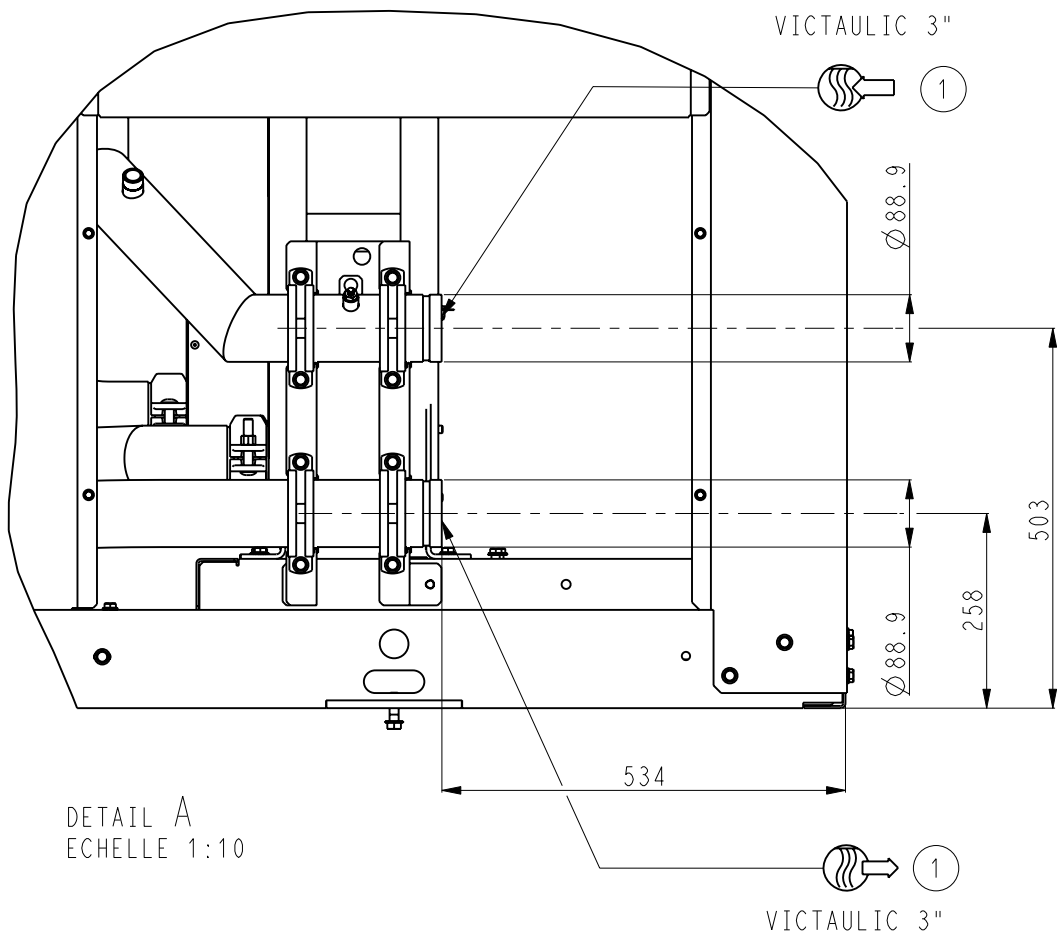

DETAIL A
ECHELLE 1:10


TOLERANCE	30RBP170R -----> 270R	DATE	14-Feb-23	Feuille Sheet 1/7
±10	305C			Indice A
00DCG000468500				

OVERALL DIMENSIONS AND WATER INLET AND OUTLET CONNECTION WITH PUMP

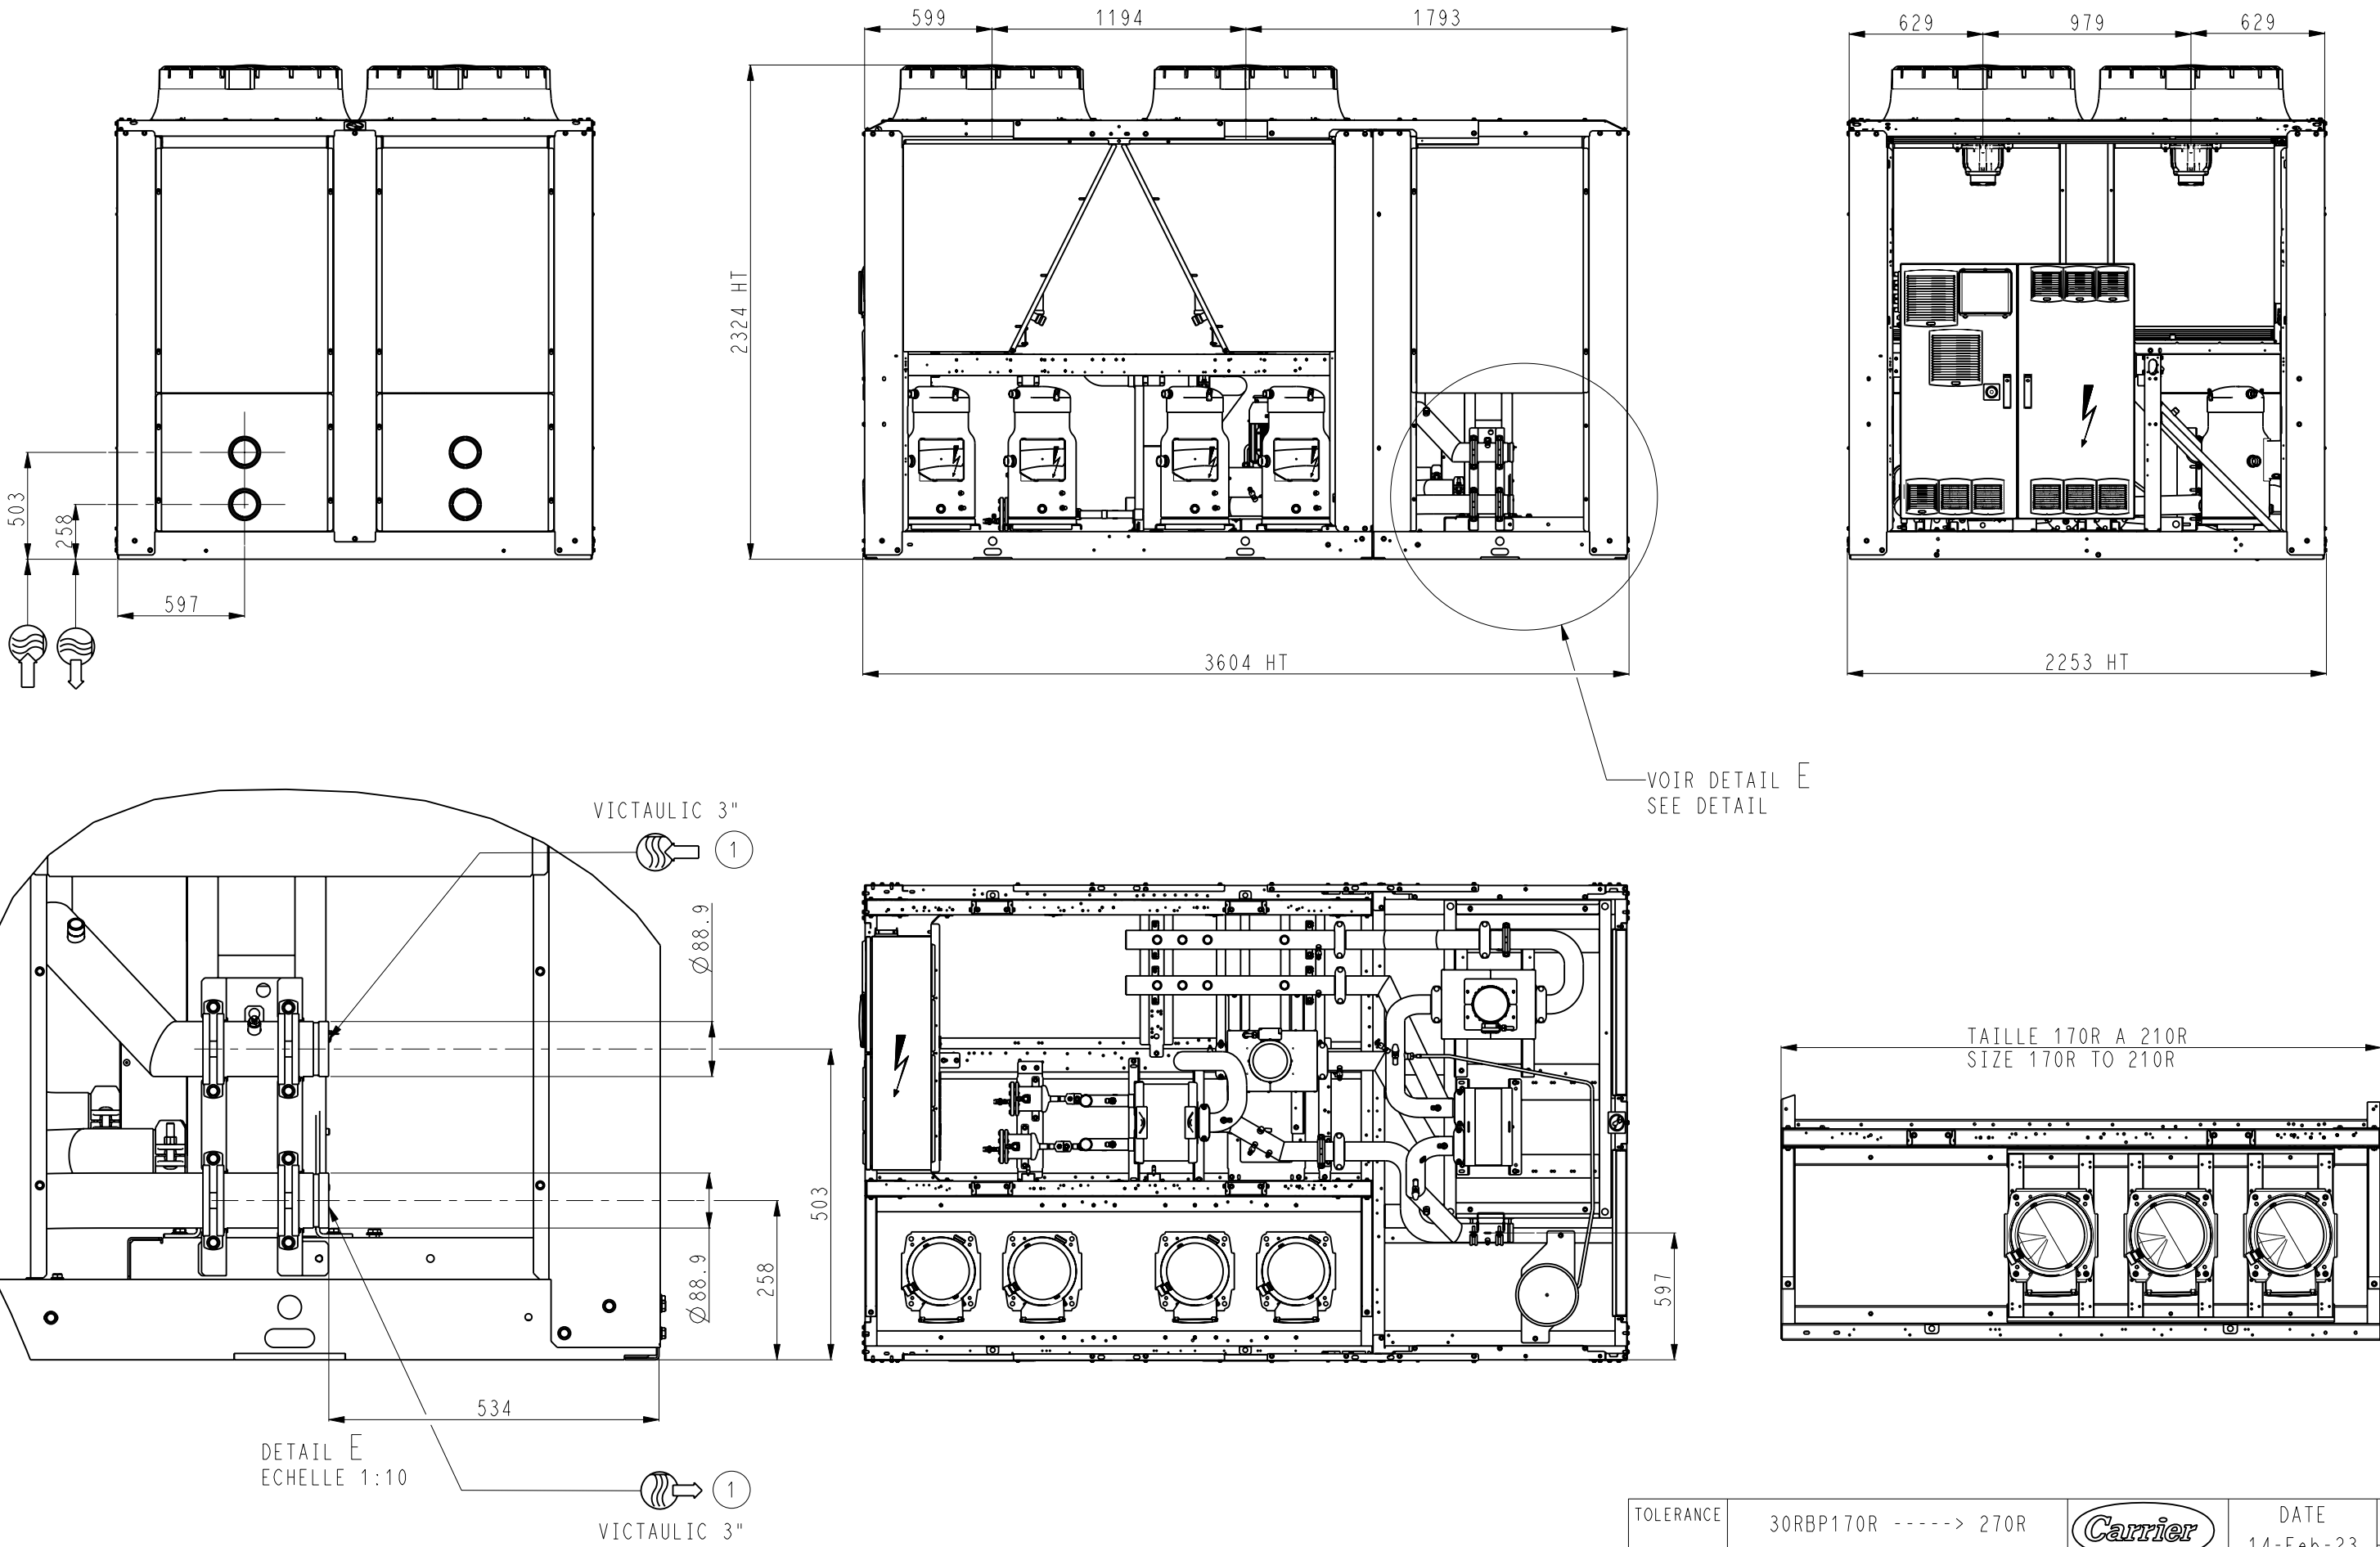


TOLERANCE	30RBP170R -----> 270R	Carrier	DATE	Feuille
±10	305C		14-Feb-23	Sheet
		00DCG000468500		2/7
				Indice
				A

COG AND LIFTING INFORMATION


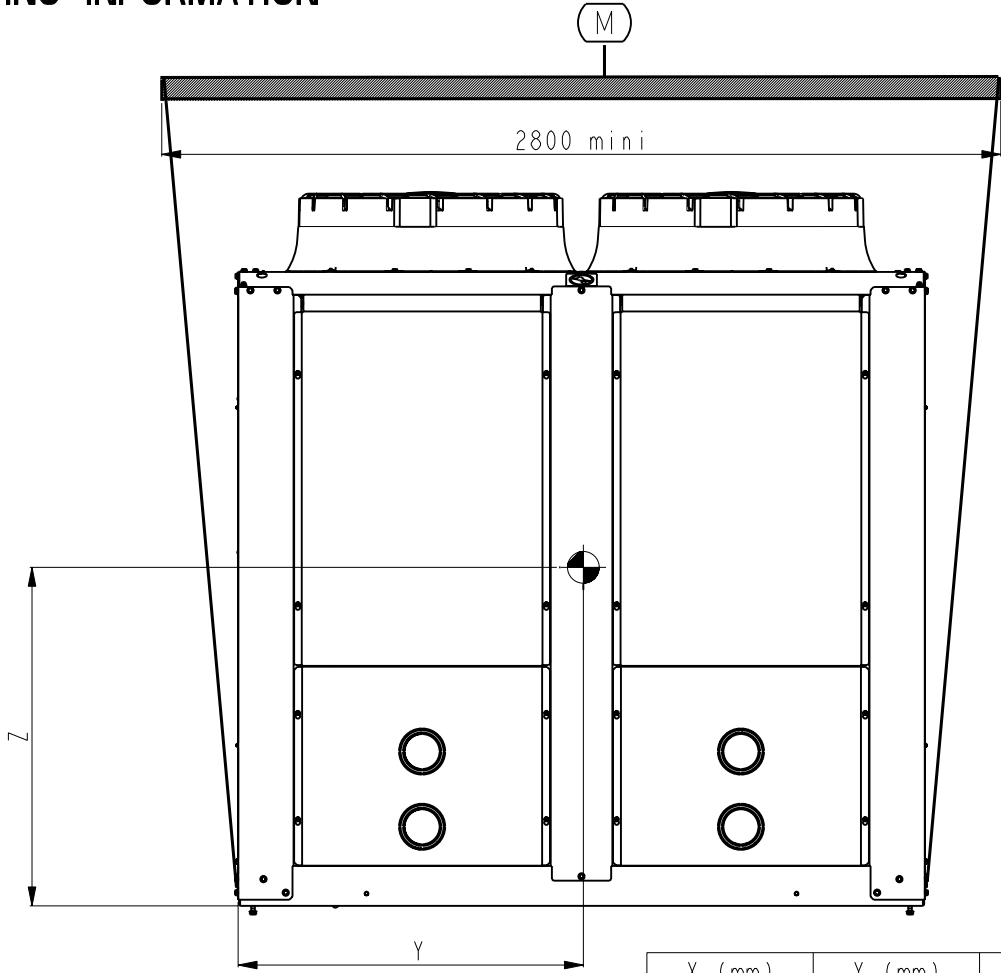


X (mm)	Y (mm)	Z (mm)
1782 ± 160	1020 ± 20	765 ± 40







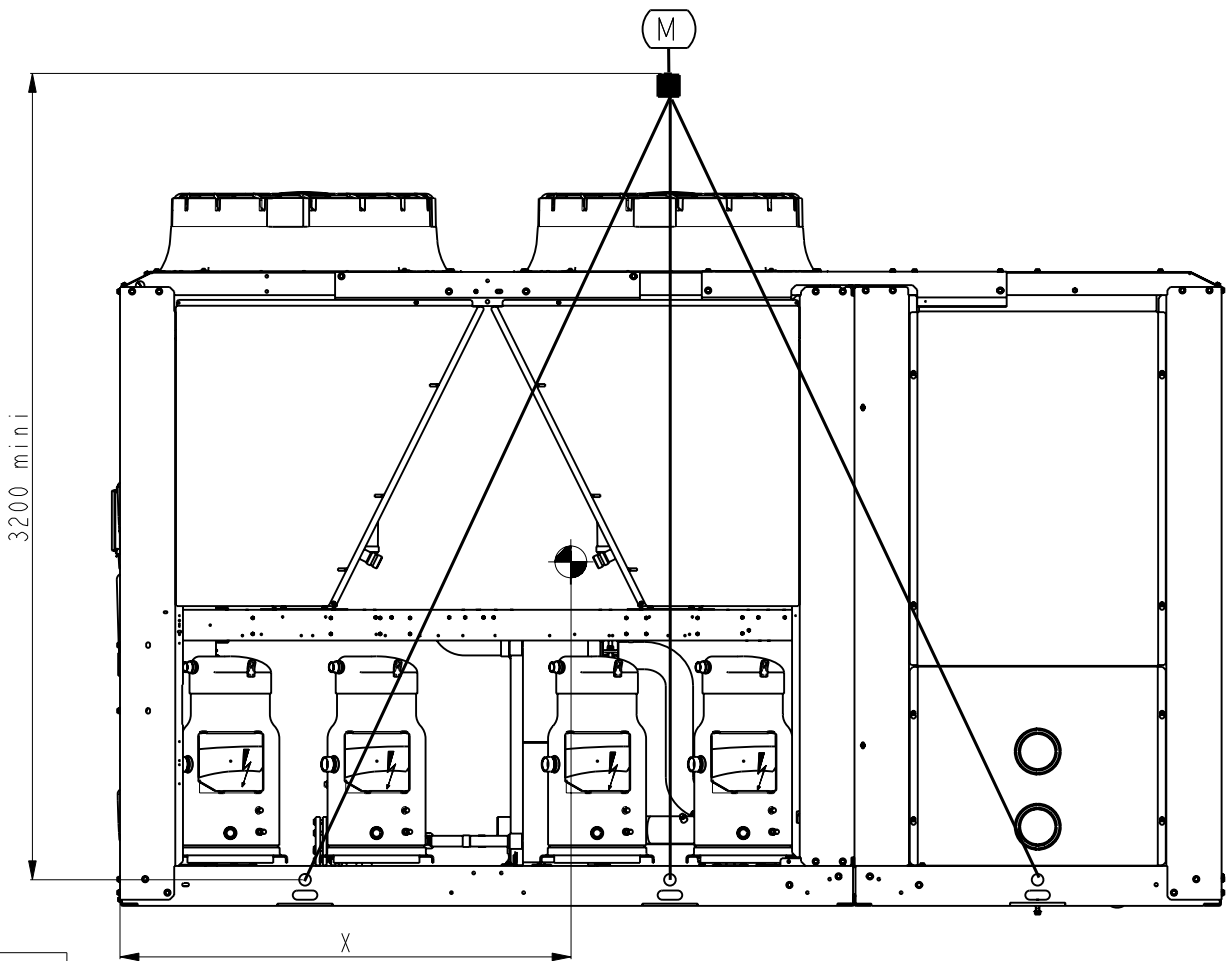


DETAIL FOR ALL HANDLING POINTS

P1 a P6
P1 to P6

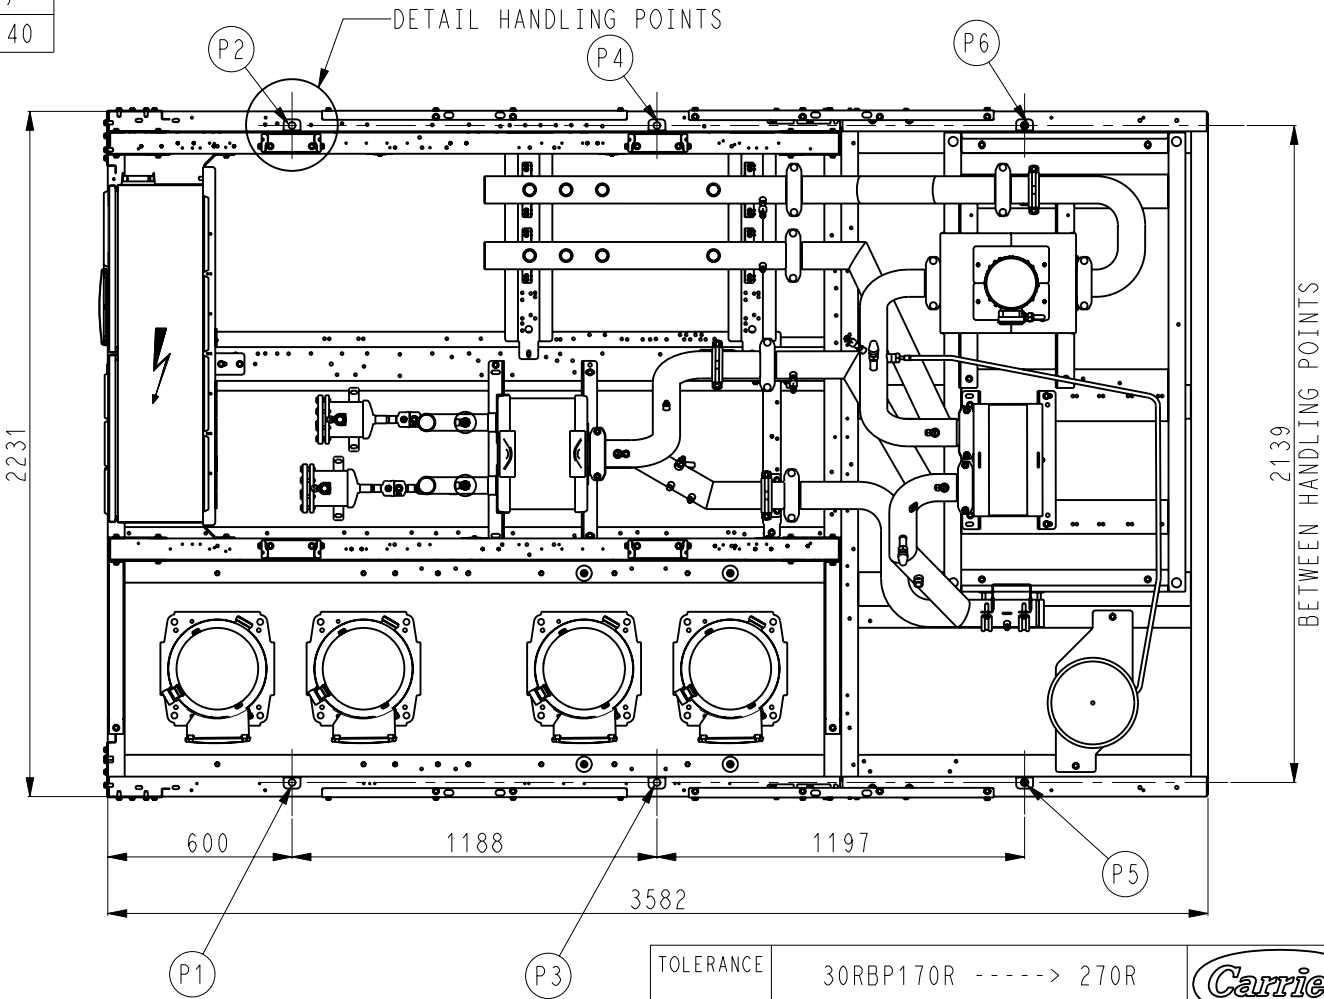
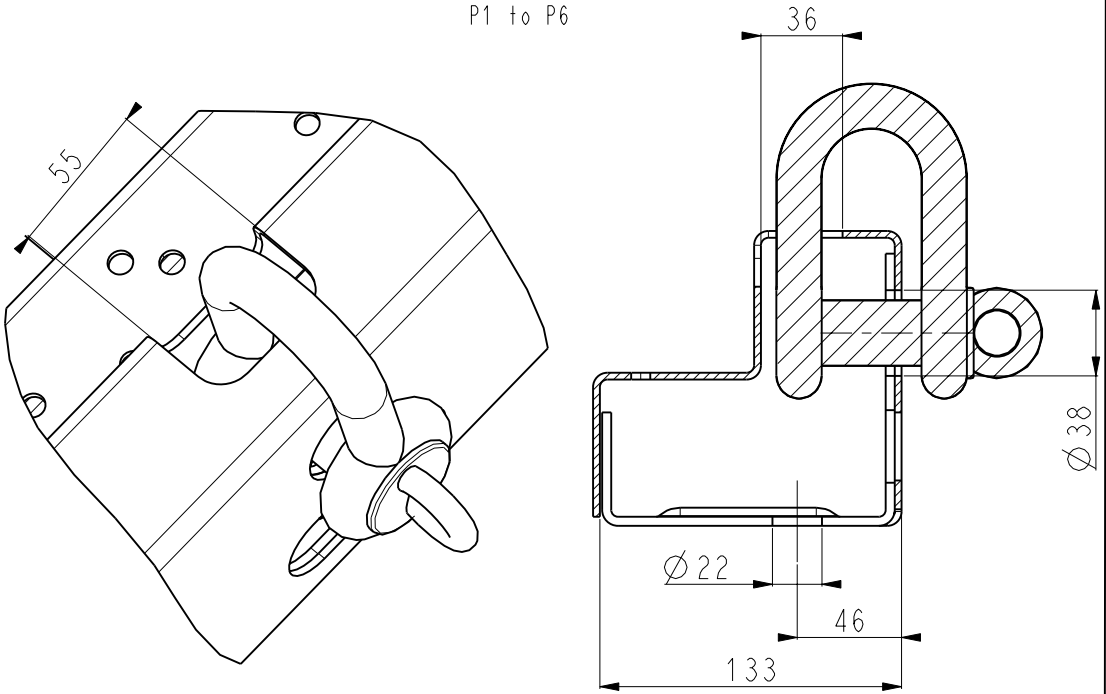


REGULATORY INFORMATION, SERVICE/ RELIEF VALVE AND SERVICE AREA

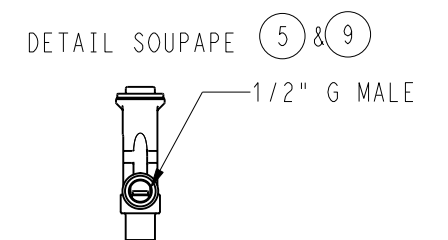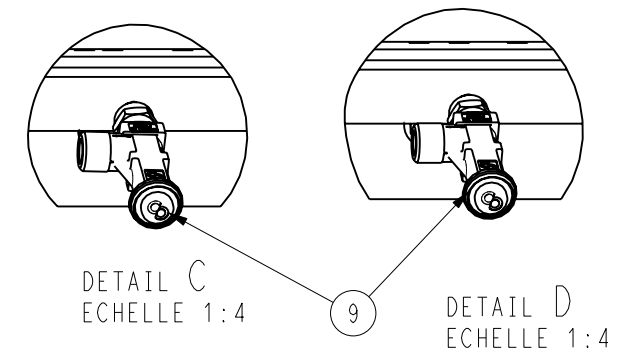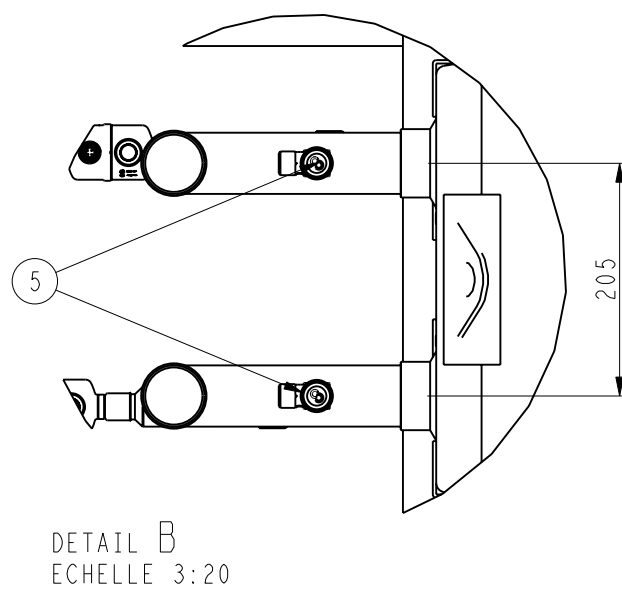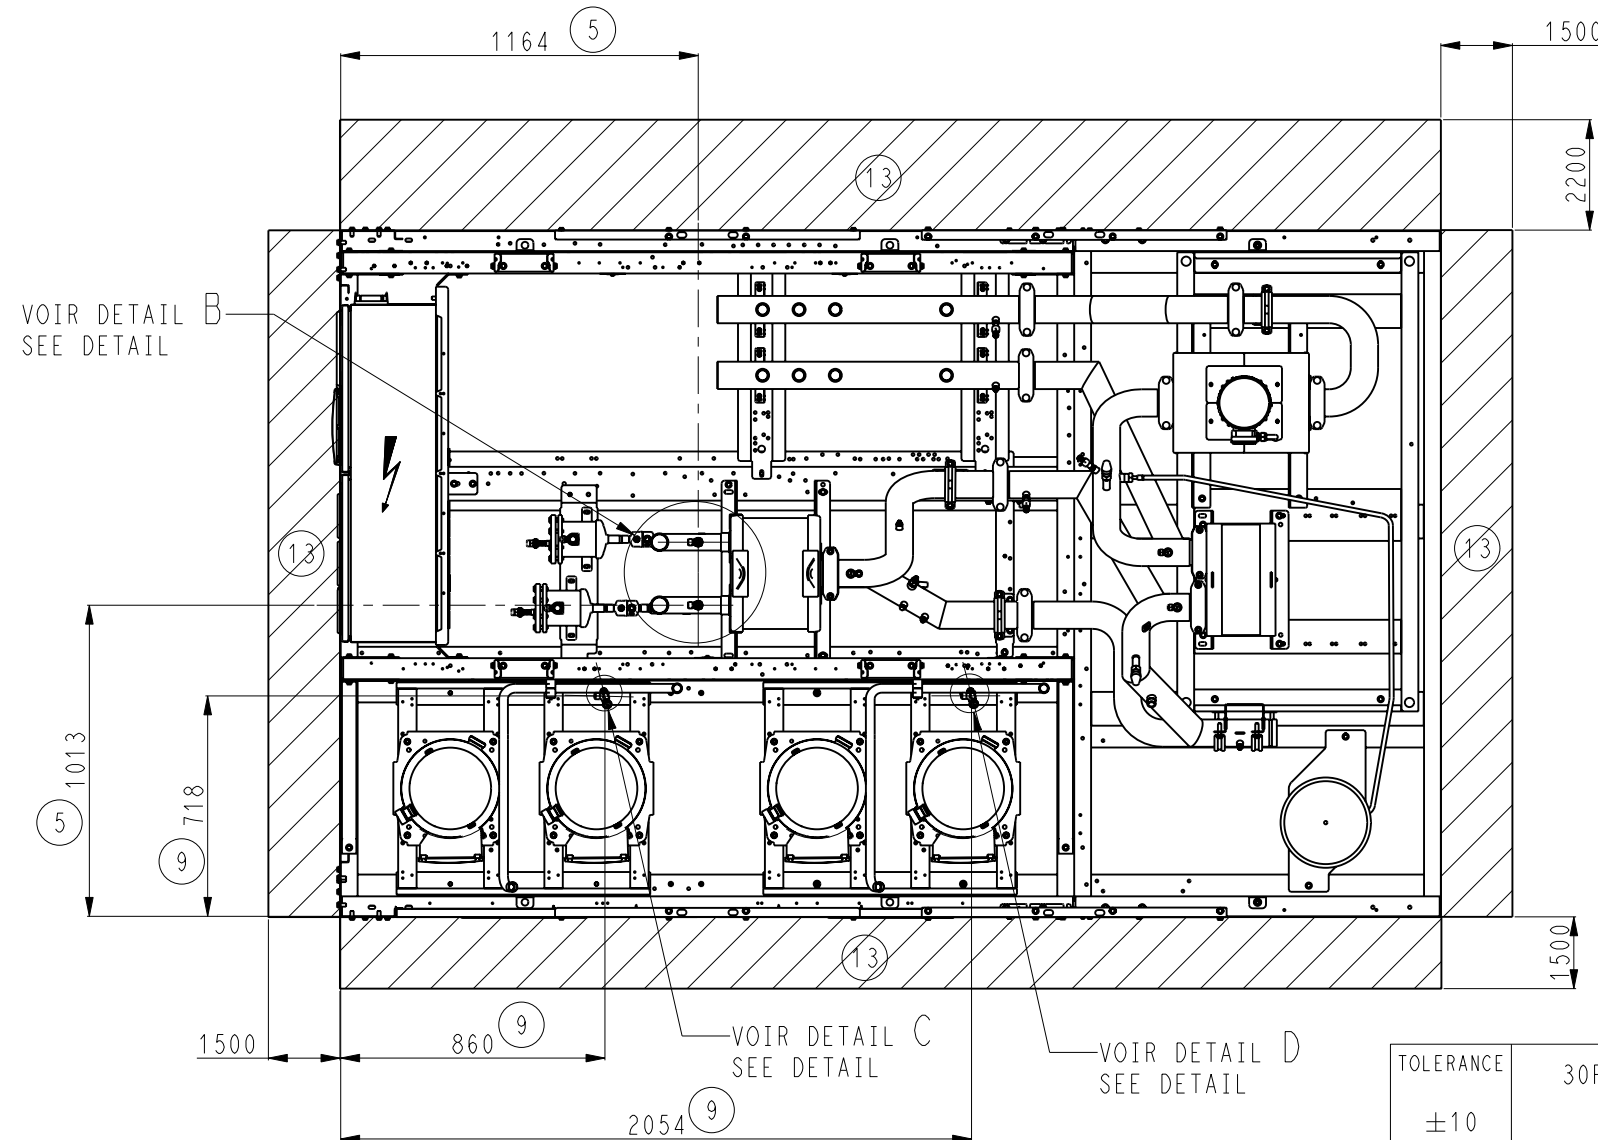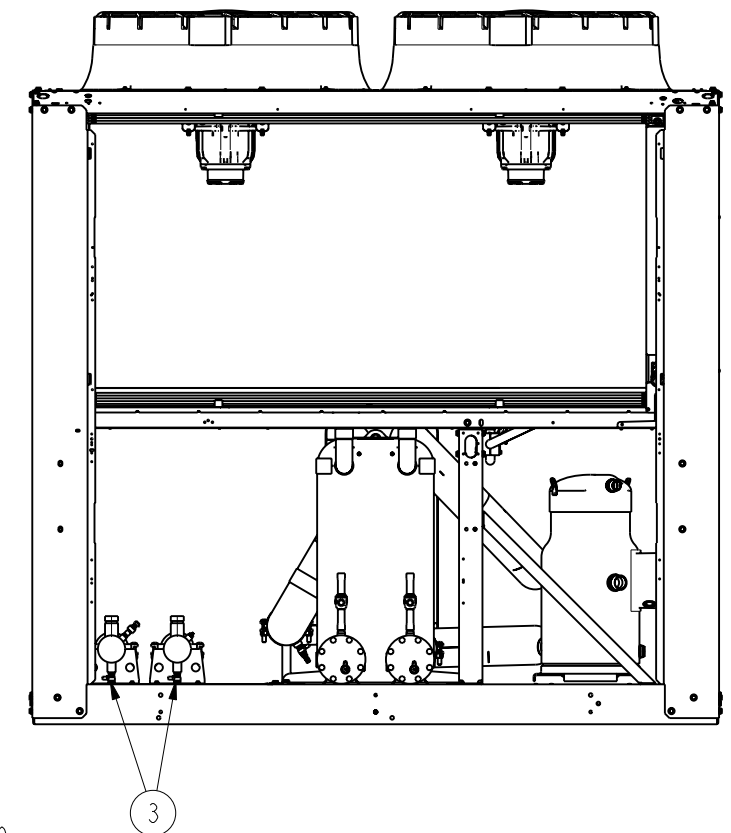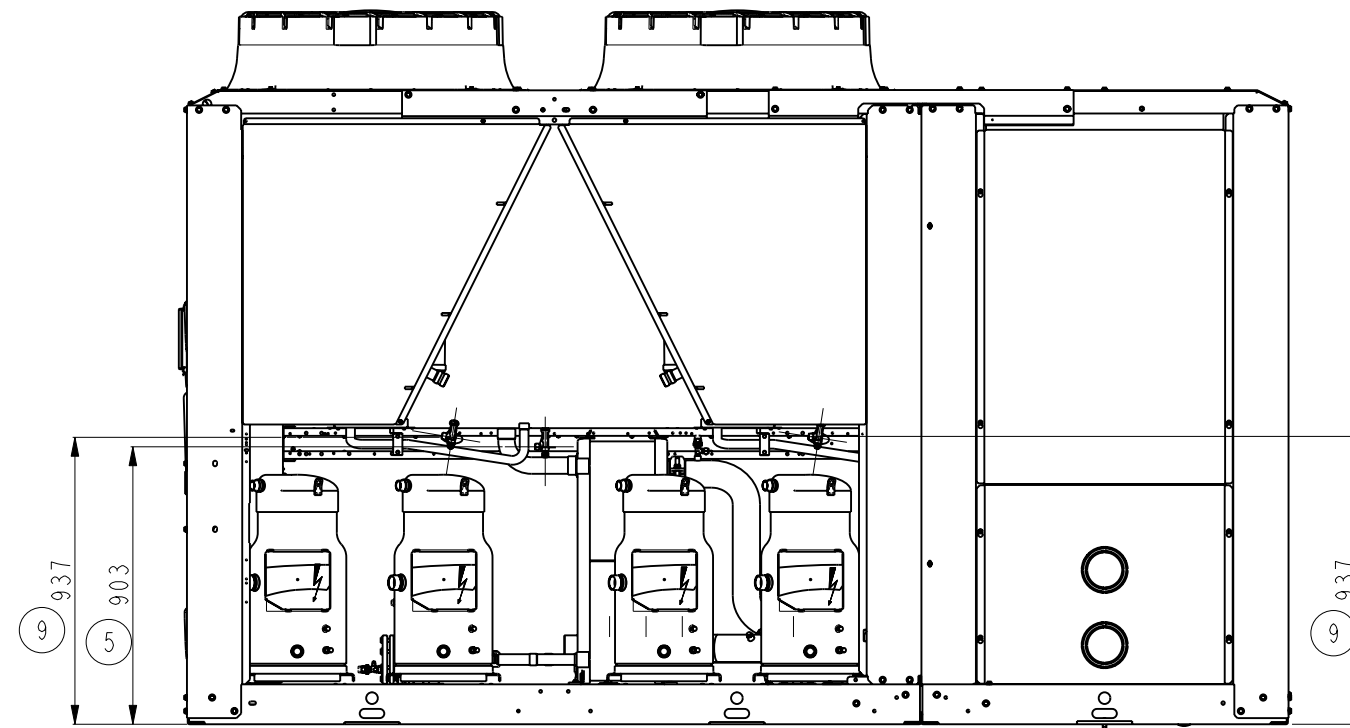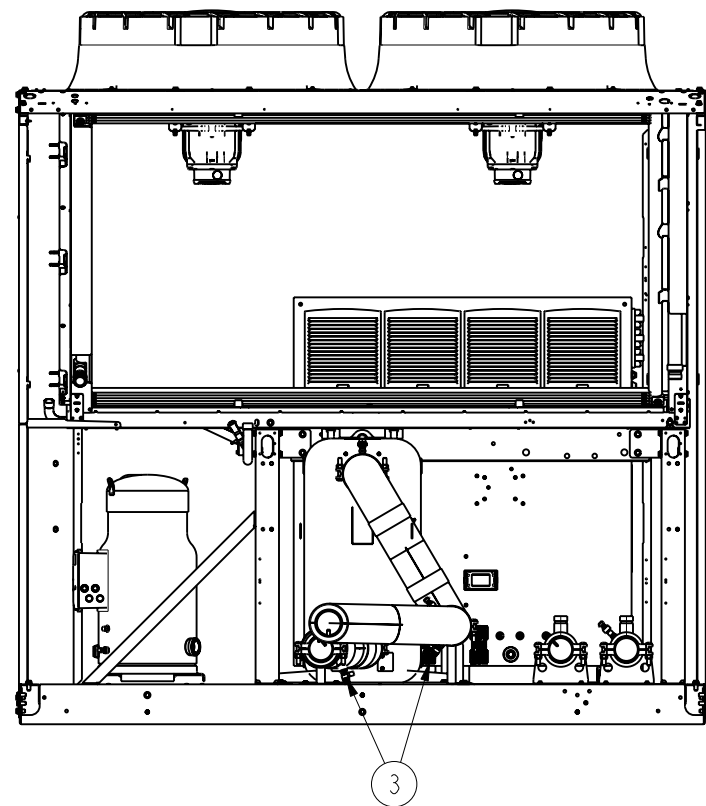



TOLERANCE	30RBP170R -----> 270R	Carrier	DATE	Feuille
±10	305C		14-Feb-23	Sheet
		00DCG000468500		4/7
				Indice
				A

ELECTRICAL BOX INFORMATION

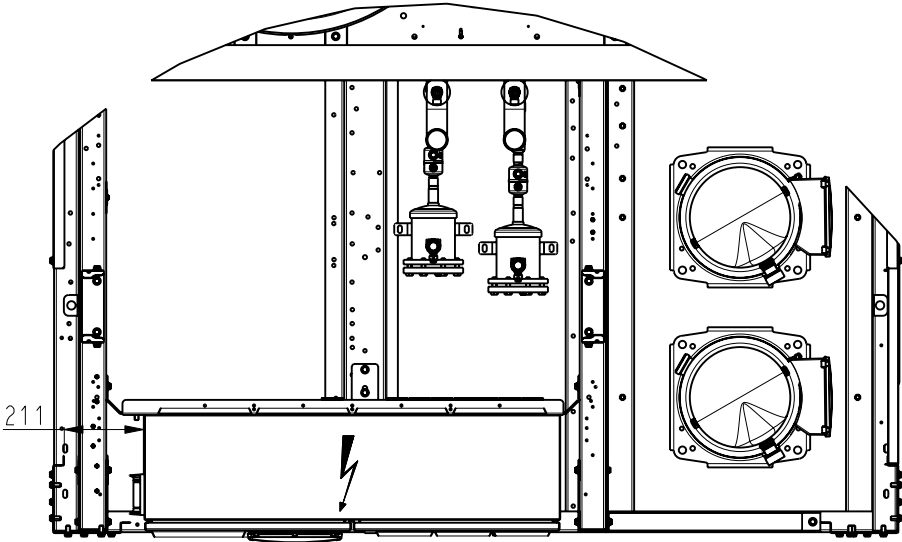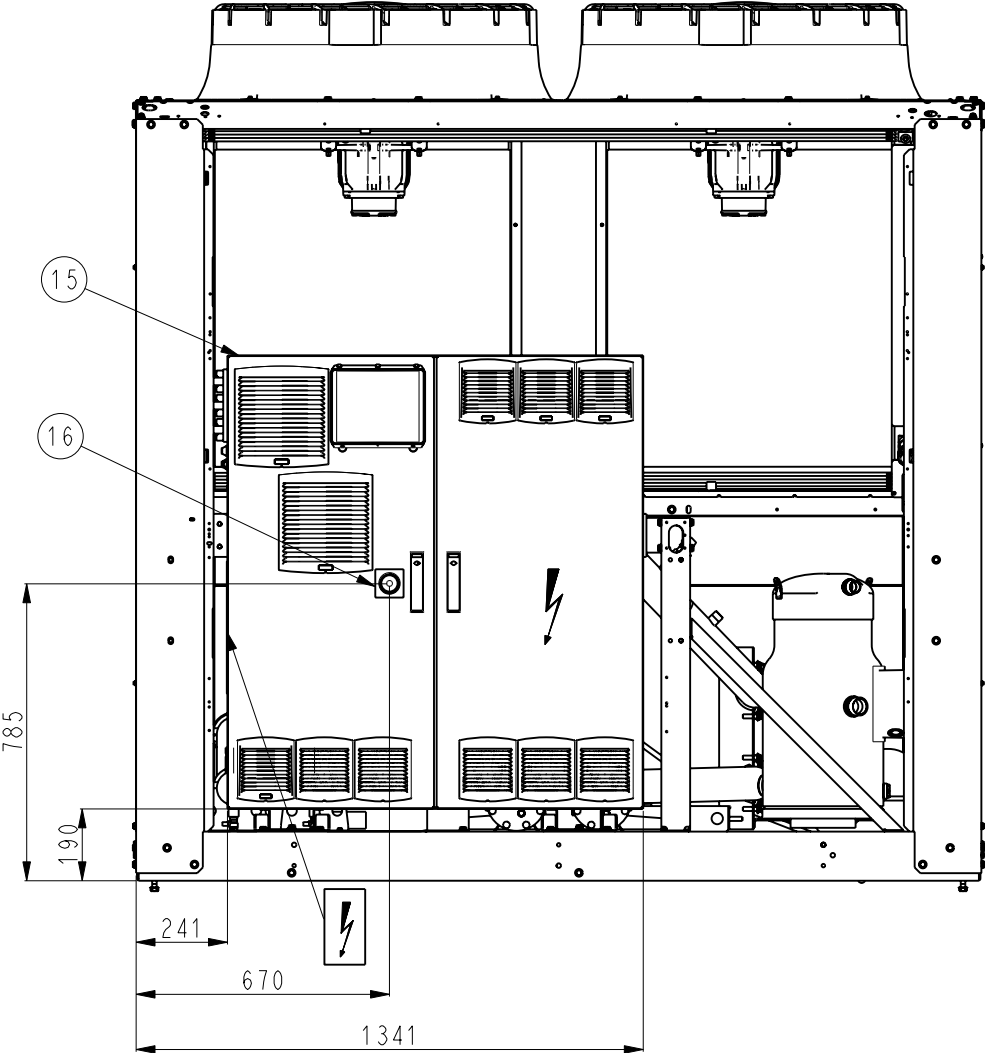



CUSTOMER CONNECTION

STANDARD

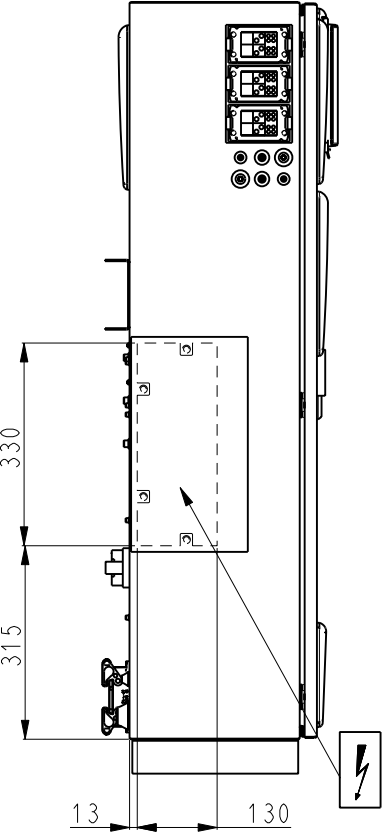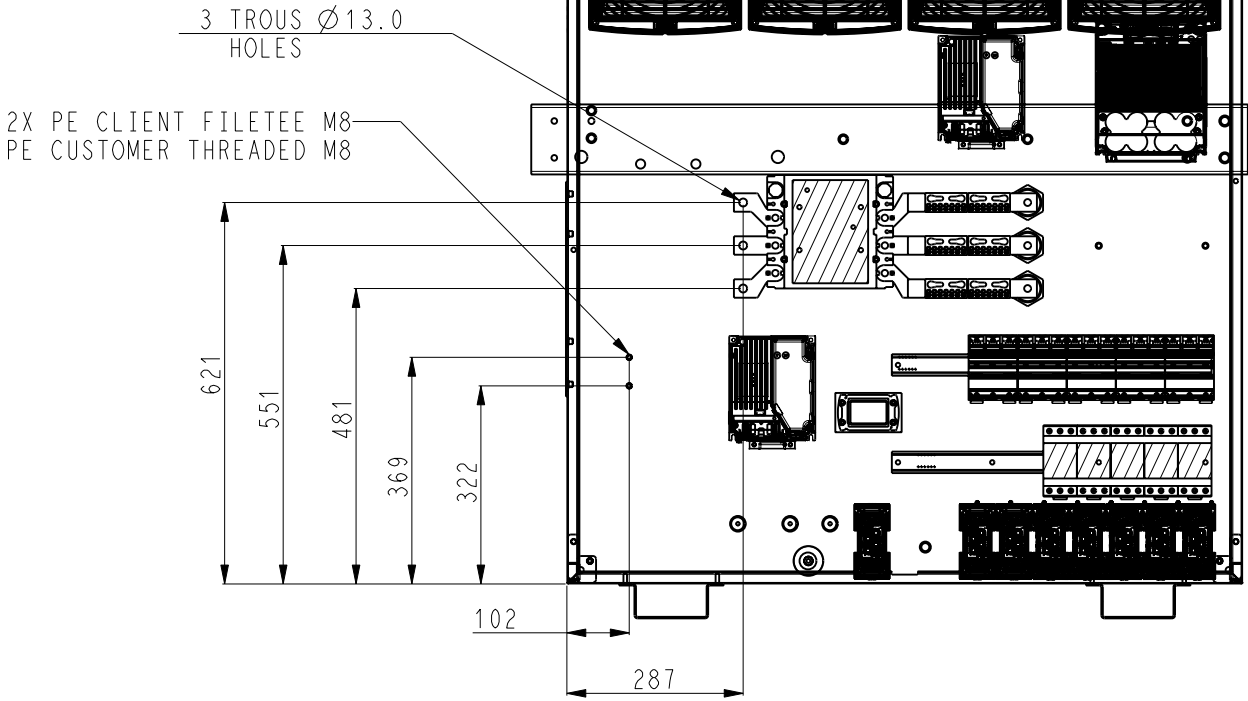

TOLERANCE	30RBP170R -----> 270R	Carrier	DATE	Feuille
±10	305C		14-Feb-23	Sheet
		00DCG000468500		5/7
				Indice
				A

OPT-266

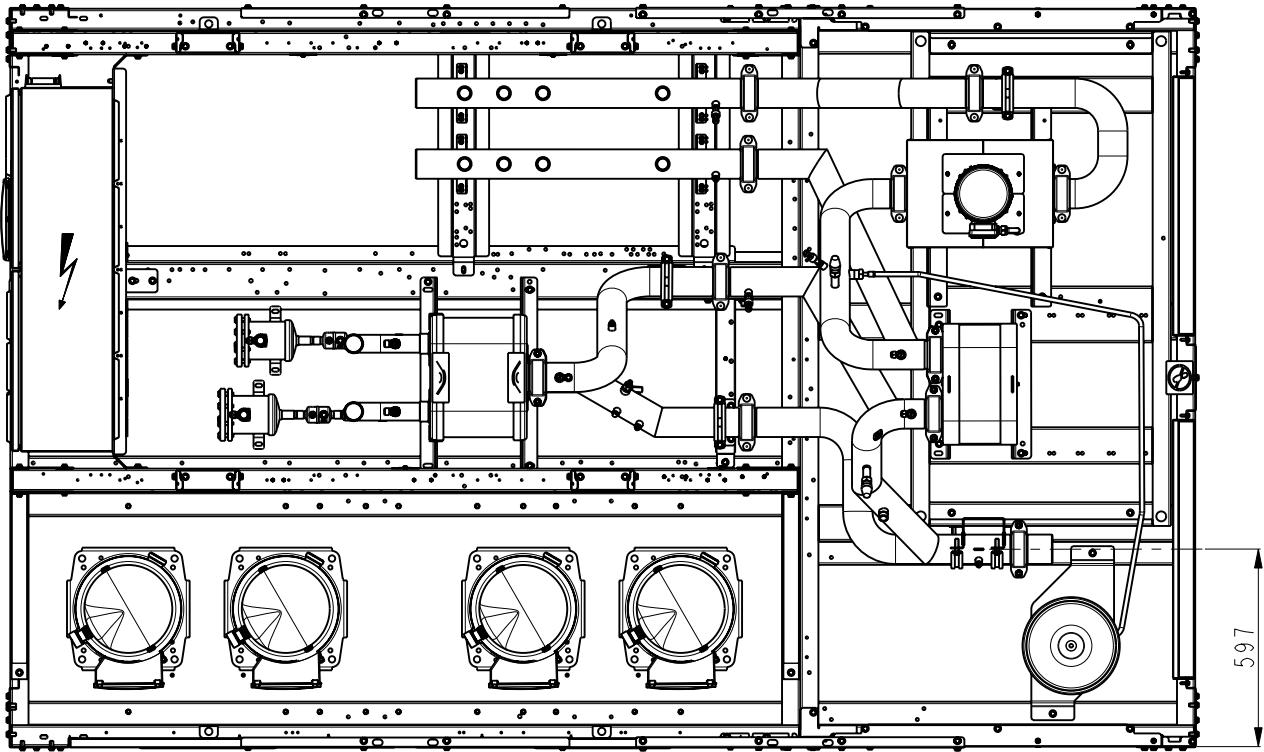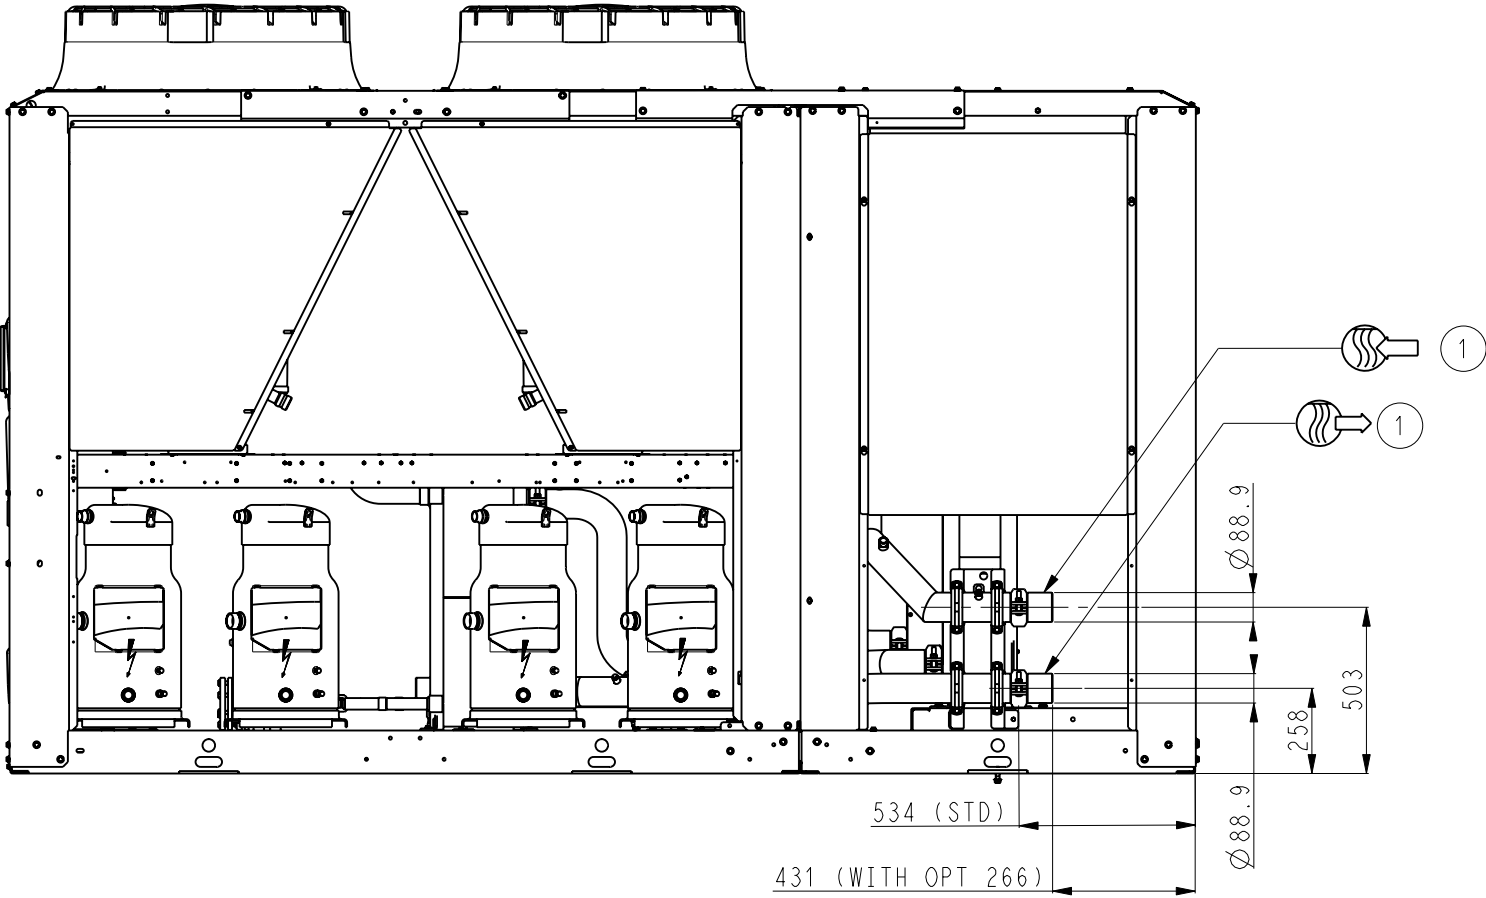

SYMBOLS DESCRIPTIONS

	ENGLISH	FRANCAIS	DEUTSCH	ESPANOL	ITALIANO
	Cooler water inlet and outlet	Entrée et sortie eau évaporateur	Kaltwasser eintritt und austritt	Entrada y salida agua al evaporador	Entrata e uscita acqua evaporatore
	NA	NA	NA	NA	NA
	Water drain	Purge eau évaporateur	Kaltwasser abfluss	Drenaje agua evaporador	Scarico acqua evaporatore
	NA	NA	NA	NA	NA
	Safety relief valve LP	Soupape de sécurité BP	Verdampfer sichereitsventil LP	Valvula de seguridad LP	Valvola di sicurezza LP
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	Safety relief valve HP	Soupape de sécurité HP	Verdampfer sichereitsventil HP	Valvula de seguridad HP	Valvola di sicurezza HP
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	Services clearances required	Espace nécessaire à la maintenance	Freiraum für wartung	Espacio necesario para servicio y mantenimiento	Spazio necessario per il servizio
	NA	NA	NA	NA	NA
	Electrical box	Coffret électrique	Schaltschrang	Caja electrica	Pannello elettrico
	Main disconnect switch	Interrupteur général	Haupttrennschalter	Interruptor de desconexion principal	Sezionatore general
	NA	NA	NA	NA	NA
	Total operating weight	Poids total en fonctionnement	Betriebsgewicht	Peso en funcionamiento	Peso in funzionamento
	Inlet water	Entrée eau	Wasser eintritt	Entrada agua	Entrata acqua
	Outlet water	Sortie eau	Wasser austritt	Salida agua	Uscita acqua
	Electrical supply entry	Entrée raccordement électrique	Strom Anschlüsse	Entrada cables electricos	Entrata cavi alimentazione
	Center of gravity	Centre de gravité	Maschinenschwerpunkt	Centro de gravedad	Centro di gravita
	Handling Rigging of the unit: the sizing of the rigging or lifting elements is the responsibility of the installer	Manutention de l'unité Le dimensionnement des éléments de manutention ou de levage sont sous la responsabilité du manutentionnaire	Anheben des geräts Der installateur ist für die dimensionierung der hebeelemente verantwortlich	Sostienimento de la unidad Las dimensiones de los elementos de sostienimento o levantamiento es responsabilidad de instalador	Sollevamento dell'apparechio La responsabilita del dimensionamento degli elementi di sistema di sollevamento e di pertinenza dell'installatore